

Service Manual

Lexmark Forms Printer 4227

4227-X00

- Table of Contents
- Start Diagnostics
- Safety and Notices
- Trademarks
- Index

LEXMARK™

Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

First Edition (June 1999)

The following paragraph does not apply to any country where such provisions are inconsistent with local law : LEXMARK INTERNATIONAL, INC. PROVIDES THIS PUBLICATION “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

Service Menu 3-4
Button Test 3-4
Factory Setting 3-4
Printhead Bank 3-4
Jam / PSet Sensor Test. 3-4
Impact Force 3-5
Log Clear 3-5
Print Test 3-5
Other Print Tests 3-5
Error Log 3-6
Repair Information 4-1
Handling ESD-Sensitive Parts 4-1
Adjustments 4-2
Printhead Installation Adjustment 4-2
Printhead-to-Platen Gap Adjustment. 4-2
Bidirectional Print Adjustment 4-4
Removal Procedures 4-6
Top Cover Removal. 4-6
Auto Gap Motor 4-8
Auto Sheet Feeder Gears Removal 4-9
Auto Sheet Feeder Pick-up Roller Removal 4-10
Belt Tension Pulley Plate Assembly Removal. 4-11
Base Assembly Removal. 4-11
Carrier Removal 4-12
Carrier Motor Assembly Removal 4-15
Carrier Plate Removal 4-16
Label Jam Removal. 4-16
Lower Feed Roller Removal 4-17
Lower Pinch Roller Removal 4-21
Main Logic Board Removal 4-22
Memory Module Removal 4-22
Operator Panel Assembly Removal 4-23
Paper Empty Sensor /TOF Sensor Removal. 4-23
Paper Feed Motor Removal 4-26
Paper Guide Removal 4-26
Paper Guide / Platen Assembly Removal 4-26
Paper Select Lever Removal. 4-27
Paper Select Sensor Removal 4-27
Paper Separator Removal. 4-28
Power Supply Removal 4-30
Power Supply Fan Removal 4-30
Print Unit Removal. 4-30
Printhead Removal 4-33

Printhead Cables Removal. 4-34
Ribbon Drive Motor Assembly Removal. 4-35
Right Side Frame Removal 4-36
Sub Logic Board Removal 4-38
Upper Feed Roller Removal. 4-39
Connector Locations 5-1
4227-200 5-2
Main Logic Board Connectors 5-3
4227-100 5-4
Sub Logic Board Connectors 5-4
4227-200 5-5
Operator Panel Connectors 5-5
Component Locations. 5-6
Component Location Illustrations 5-7
Signal Connections. 5-9
Connector Block Diagram 5-20
Tractor 2 Cable Connectors. 5-21
Preventive Maintenance 6-1
Lubrication 6-1
Specified Lubricants. 6-1
Lubrication Points. 6-2
Parts Catalog 7-1
How to Use This Parts Catalog. 7-1
Assembly 1: Covers and Operator Panel 7-2
Assembly 2: Paper Feed 7-4
Assembly 3: Carrier 7-6
Assembly 4: Base and Electronics 7-8
Assembly 5: ASF Side Frame / Covers 7-10
Assembly 6: ASF Roller / Support 7-12
Assembly 7: Tractor 2 Option 7-14
Index. X-1

Preface

This manual describes the Lexmark Forms Printer 4227-100 and 4227-200. It contains maintenance procedures for service personnel and is divided into the following chapters:

- **General Information** contains a general description of the printer and the maintenance approach used to repair it. Special tools and test equipment are listed in this chapter, as well as general environmental and safety instructions.
- **Diagnostic Information** contains error code table, symptom table, and service checks used to isolate failing field replaceable units (FRUs).
- **Diagnostic Aids** contains tests and checks used to locate or repeat symptoms of printer problems.
- **Repair Information** provides instructions for making printer adjustments and removing and installing FRUs.
- **Connector Locations** uses illustrations to identify the major components and test points on the printer.
- **Preventive Maintenance** contains lubrication specifications, and maintenance information to prevent problems and maintain optimum performance.
- **Parts Catalog** contains illustrations and part numbers for individual FRUs.

Notices

Safety Information

- This product is designed, tested and approved to meet strict global safety standards with the use of specific Lexmark components. The safety features of some parts may not always be obvious. Lexmark is not responsible for the use of other replacement parts.
- The maintenance information for this product has been prepared for use by a professional service person and is not intended to be used by others.
- There may be an increased risk of electric shock and personal injury during disassembly and servicing of this product. Professional service personnel should understand this and take necessary precautions.

Consignes de Sécurité

- Ce produit a été conçu, testé et approuvé pour respecter les normes strictes de sécurité globale lors de l'utilisation de composants Lexmark spécifiques. Les caractéristiques de sécurité de certains éléments ne sont pas toujours évidentes. Lexmark ne peut être tenu responsable de l'utilisation d'autres pièces de rechange.
- Les consignes d'entretien et de réparation de ce produit s'adressent uniquement à un personnel de maintenance qualifié.
- Le démontage et l'entretien de ce produit pouvant présenter certains risques électriques, le personnel d'entretien qualifié devra prendre toutes les précautions nécessaires.

Norme di sicurezza

- Il prodotto è stato progettato, testato e approvato in conformità a severi standard di sicurezza e per l'utilizzo con componenti Lexmark specifici. Le caratteristiche di sicurezza di alcune parti non sempre sono di immediata comprensione. Lexmark non è responsabile per l'utilizzo di parti di ricambio di altri produttori.
- Le informazioni riguardanti la manutenzione di questo prodotto sono indirizzate soltanto al personale di assistenza autorizzato.
- Durante lo smontaggio e la manutenzione di questo prodotto, il rischio di subire scosse elettriche e danni alla persona è più elevato. Il personale di assistenza autorizzato, deve, quindi, adottare le precauzioni necessarie.

Sicherheitshinweise

- Dieses Produkt und die zugehörigen Komponenten wurden entworfen und getestet, um beim Einsatz die weltweit gültigen Sicherheitsanforderungen zu erfüllen. Die sicherheitsrelevanten Funktionen der Bauteile und Optionen sind nicht immer offensichtlich. Sofern Teile eingesetzt werden, die nicht von Lexmark sind, wird von Lexmark keinerlei Verantwortung oder Haftung für dieses Produkt übernommen.
- Die Wartungsinformationen für dieses Produkt sind ausschließlich für die Verwendung durch einen Wartungsfachmann bestimmt.
- Während des Auseinandernehmens und der Wartung des Geräts besteht ein zusätzliches Risiko eines elektrischen Schlags und körperlicher Verletzung. Das zuständige Fachpersonal sollte entsprechende Vorsichtsmaßnahmen treffen.

Pautas de Seguridad

- Este producto se ha diseñado, verificado y aprobado para cumplir los más estrictos estándares de seguridad global usando los componentes específicos de Lexmark. Puede que las características de seguridad de algunas piezas no sean siempre evidentes. Lexmark no se hace responsable del uso de otras piezas de recambio.
- La información sobre el mantenimiento de este producto está dirigida exclusivamente al personal cualificado de mantenimiento.
- Existe mayor riesgo de descarga eléctrica y de daños personales durante el desmontaje y la reparación de la máquina. El personal cualificado debe ser consciente de este peligro y tomar las precauciones necesarias.

Informações de Segurança

- Este produto foi concebido, testado e aprovado para satisfazer os padrões globais de segurança na utilização de componentes específicos da Lexmark. As funções de segurança de alguns dos componentes podem não ser sempre óbvias. A Lexmark não é responsável pela utilização de outros componentes de substituição.
- As informações de segurança relativas a este produto destinam-se a profissionais destes serviços e não devem ser utilizadas por outras pessoas.
- Risco de choques eléctricos e ferimentos graves durante a desmontagem e manutenção deste produto. Os profissionais destes serviços devem estar avisados deste facto e tomar os cuidados necessários.

Informació de Seguretat

- Aquest producte està dissenyat, comprovat i aprovat per tal d'acomplir les estrictes normes de seguretat globals amb la utililització de components específics de Lexmark. Les característiques de seguretat d'algunes peces pot ser que no sempre siguin òbvies. Lexmark no es responsabilitza de l'us d'altres peces de recanvi.
- La informació pel manteniment d’aquest producte està orientada exclusivament a professionals i no està destinada a ningú que no ho sigui.
- El risc de xoc elèctric i de danys personals pot augmentar durant el procés de desmuntatge i de servei d’aquest producte. El personal professional ha d’estar-ne assabentat i prendre les mesures convenients.

安全资讯

- 本产品使用特有的 Lexmark 元件，并依照严格的世界安全标准来设计、测试及验证。有些零件的安全功能可能不明显。对於其他厂牌更换零件的使用， Lexmark 概不负责。
- 本产品的维护资讯仅供专业服务人员使用，而非针对一般使用者。
- 本产品在拆卸、维修的时候，遭受电击或人员受伤的危险性会增高，专业服务人员对这点必须有所了解，并采取必要的预防措施。

안전 사항

- 본 제품은 특정 Lexmark 구성 요소의 사용에 있어 엄격한 세계 안전 표준에 맞도록 설계, 테스트되었으며 승인받았습니다. 일부 부품의 안전성은 항상 보장되지 않습니다. Lexmark는 다른 교체 부품의 사용에 대한 책임을 지지 않습니다.

- 본 제품에 관한 유지 보수 설명서는 전문 서비스 기술자용으로 작성된 것이므로 비 전문가는 사용할 수 없습니다.

- 본 제품을 해체하거나 정비할 경우 전기적인 충격을 받거나 상처를 입을 위험이 커집니다. 전문 서비스 기술자는 이 사실을 숙지하고 필요한 예방 조치를 취하도록 하십시오.

1. General Information

Description

The Lexmark Form Printer 4227-100 and 4227-200 are dot matrix, electro-mechanical printers that form characters on print media using a printhead and fabric ribbon. The printhead is composed of 18 miniature solenoids containing print wires and operates on electromagnetic principles. When a solenoid is energized, the small print wire pin is “fired” toward the ribbon to make a dot on the paper. The printer receives commands in the form of an electronic data stream from the PC through the parallel or serial port connector. The printer logic receives and translates the electronic data stream into carrier returns, line spacing, characters, or graphics as instructed.

This is a versatile printer that combines excellent print quality along with the ability to print several print styles and graphics. Some of the features and functions included with this printer are:

Feature	Function
Multi-speed Printing	FastDraft - 533 cps (4227-100) Draft - 400 cps (4227-100) Courier and Gothic (NLQ) - 100 cps (4227-100) FastDraft -720 cps (4227-200) Draft - 600 cps (4227-200)) Courier and Gothic (NLQ) - 150 cps (4227-200)
Resident Fonts	FastDraft, Draft, Courier and Gothic
Forms Handling	Forms (straight paper path) Automatic tear-off Automatic paper loading/unloading
Cut Sheets	Manual Optional Auto Sheet Feeder
Multiple Part Forms	6-Part Forms (carbon and carbonless) (4227-200 - up to 8-Part Forms)
Interface Connection	Parallel, Serial RS-422, Serial RS-232
Auto Gap	When Auto Gap is set to On, the printer automatically adjusts to the thickness of paper you are using.

Voltage, Ground, and Continuity Readings

Voltage Readings

All DC voltages must be within +5% through -10% of the values to be considered correct. Unless stated otherwise, all connectors should be connected normally when a voltage measurement is done.

When a “Line Voltage” measurement is to be done, the voltage on United States and Canada machines should be between 100 V ac and 127 V ac. On World Trade machines, the voltage is according to each country’s specification.

Ground Checks

To check for a correct ground, measure the voltage between the ground and a known good voltage source. The voltage measurement must be the same as the source voltage to consider the ground is correct. Continuity measurements may be used to check grounds, however, be sure to measure to a known good ground using the lowest ohms scale and check for zero ohms.

Note: Always unplug the power cord before doing any continuity measurement.

Continuity Readings

When measuring continuity, be sure no back circuits affect the measurement. If necessary, unplug connectors to remove any back circuits. Zero the ohm range on the lowest scale (X1). An open circuit will read infinity. A circuit with correct continuity will read zero ohms.

Maintenance Approach

The diagnostic information in this manual leads you to the correct field replaceable unit (FRU) or part. Use the error indication table, symptom/check table, service checks and diagnostic aids to determine the symptom and repair the failure. Begin with "“Start” on page 2-1"

Options

The following options may be installed:

- Auto Sheet Feeder (ASF)
- Tractor 2
- Extended Cut-sheet Paper Guides
- 32kb Memory Module
- Extended National Language Support modules (Non-U.S. only)

Tools

The basic tools needed are:

- Basic CE tool kit
- #1 magnetic Phillips screwdriver
- #2 magnetic Phillips screwdriver
- Feeler gauges 0.35 mm (0.014 in.) 0.4 mm (0.016 in.)
- Analog or digital volt-ohmmeter

Abbreviations

ASF	Automatic Sheet Feeder
ASIC	Application-Specific Integrated Circuit
CSU	Customer Setup
DRAM	Dynamic Random Access Memory
EPROM	Erasable Programmable Read-Only Memory
ESD	Electrostatic Discharge
FRU	Field Replaceable Unit
HVPS	High Voltage Power Supply
LAN	Local Area Network
LCD	Liquid Crystal Display
LED	Light-Emitting Diode
LVPS	Low Voltage Power Supply
NVRAM	Nonvolatile Random Access Memory
OEM	Original Equipment Manufacturer
POR	Power-On Reset
POST	Power-On Self Test
PQET	Print Quality Enhancement Technology
ROS	Read-Only Storage
SRAM	Static Random Access Memory
UPR	Used Parts Replacement
V ac	Volts alternating current
V dc	Volts direct current

Using the Operator Panel


This section provides a brief description of the operator panel buttons, lights and settings. Refer to the User's Guide for additional information.

Note: Application software may allow the user to operate the printer from a computer. Changes made to the printer settings from a software application override settings made from the operator panel, with the exception of the Font and Pitch Lock features.

Changeable printer functions include:

- Set Top of Form
- Tractor selection
- Character options
- Paper handling options
- Interface options
- Emulation options
- Macro definition and selection
- Print tests
- Auto Gap functions

Using the Function Menus

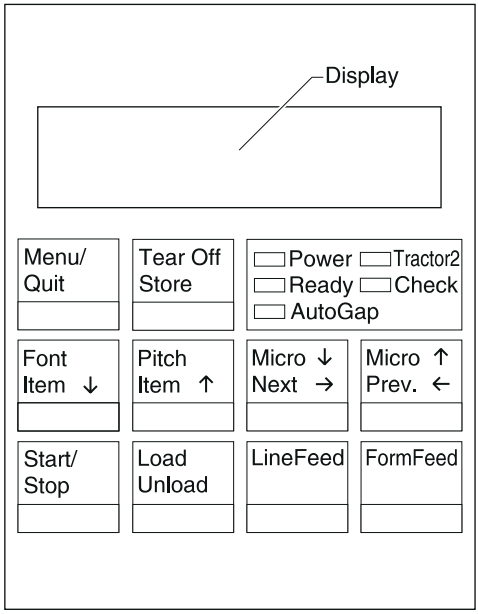

Use the **Item** ↓ and **Item** ↑ buttons to move through the menu and option directories. Press **Next** → to move away from the Main Menu to the subordinate directories and choices. Press **Prev.** ← if you want to go back in a menu or return to the Main Menu.

Setting Printer Functions

1. Press **Start/Stop**.
2. Press **Menu** to enter the function menu.
3. Press **Item** ↓ or **Item** ↑ until the function menu you want appears on the display.

Note: The selectable function menu is different depending on the selected data stream mode (IBM PPDS or Epson emulation) and the Interface mode (Parallel, RS-232 or RS-422).

4. Press **Next** → to enter that menu item.
5. Press **Item** ↓ or **Item** ↑ until the value you want appears on the display.
6. Press **Store** to save the selected value.

Note: The currently selected default value is displayed with an asterisk (*****).

If you have to change the optional value in another function menu, repeat steps 3 through 5. Otherwise, go to the next step.


7. To print the function setting, press **Item** ↓ or **Item** ↑ until the **Print Settings** message appears on the display.
8. Press **Start/Stop** to print the current setting values.
9. Press **Quit** to exit the function menus.


Note: If you have changed any settings, the printer performs a Power-On Self Test, see “Power-On Self Test (POST)” on page 3-1. If you did not change any settings, the printer enters the not-ready state.

Overview of Function Menus

Use the **Item** ↑ and **Item** ↓ buttons to move through the menu and option directories. Press **Next** → to move away from the Main Menu to the subordinate directories and choices. Press **Prev.** ← if you want to go back in a menu or return to the Main Menu.

Menu items marked with an asterisk (*) may not appear on the operator panel, depending on the printer settings or what printer options are installed

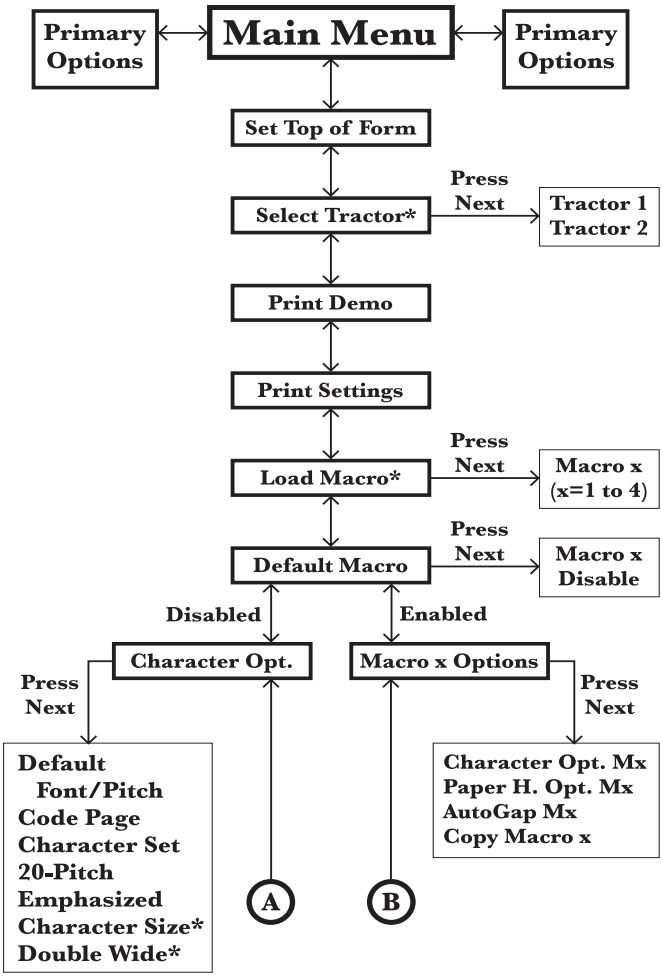

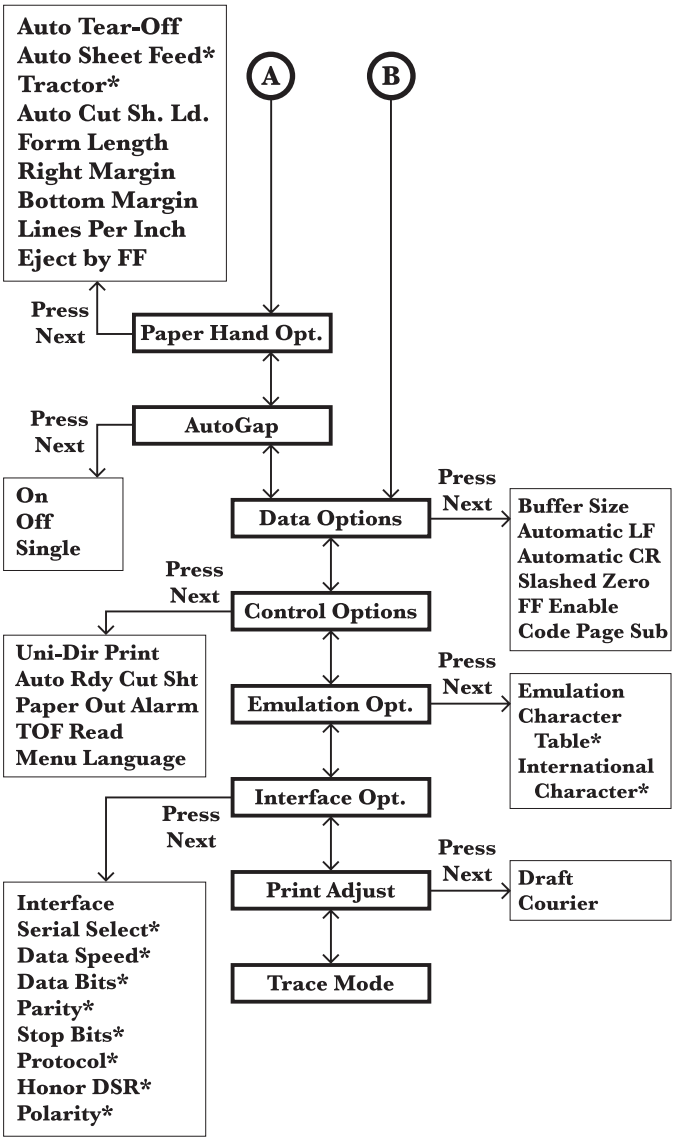
Auto Tear-Off
Auto Sheet Feed*
Tractor*
Auto Cut Sh. Ld.
Form Length
Right Margin
Bottom Margin
Lines Per Inch
Eject by FF
A
B
Press Next
Paper Hand Opt.
Press Next
AutoGap
On
Off
Single
Press Next
Data Options
Buffer Size
Automatic LF
Automatic CR
Slashed Zero
FF Enable
Code Page Sub
Press Next
Control Options
Uni-Dir Print
Auto Rdy Cut Sht
Paper Out Alarm
TOF Read
Menu Language
Press Next
Emulation Opt.
Emulation Character Table*
International Character*
Press Next
Interface Opt.
Interface
Serial Select*
Data Speed*
Data Bits*
Parity*
Stop Bits*
Protocol*
Honor DSR*
Polarity*
Press Next
Print Adjust
Draft
Courier
Trace Mode

Buttons

When using the function menus, press **Item** ↓ or **Item** ↑ to scroll through the menu items. Press **Next** → or **Prev.** ← to move to the next, or previous menu level.

Press this button:	To:
Menu	• Enter the function menu. The printer goes offline.
Quit	• Exit the function menus. • Run a Power-On Self Test (POST).
Tear Off	• Advance the forms to the tear-off position. • Retract the forms to the Top-of-Form (TOF) position when the forms are at the tear-off position.
Store	• Save the values selected in the menus.
Font	• Select a font.
Item ↓	• Scroll down.
Pitch	• Select a pitch.
Item ↑	• Scroll up.
Micro ↓	• Advance the forms down 0.35 mm (1/72 in.).
Next →	• Scroll forward.
Micro ↑	• Advance the forms up 0.35 mm (1/72 in.).
Prev. ←	• Return to the previous function menu.
Start/Stop	• Used to return to **Ready** and to **Start/Stop**. • Load the forms to TOF position with the ready light on.
Load/Unload	• Load paper (cut or continuous forms) to the TOF position. • Retract the forms to the tractor position.
LineFeed	• Advance the paper to the next line.
FormFeed	• Advance the paper to the TOF position on the next page. • Load the forms to the TOF position.

Lights

Light	When you see this light
Power (Green)	The printer power is on.
Ready (Green)	The printer is online and ready to print. The following conditions cause the **Ready** light to turn off: • Pressing **Start/Stop** • An end-of-form (EOF) • A paper jam • A cover open • A hardware error • A Power-On Self Test failure. • The printer is offline.
Check (Yellow)	Any of the following conditions may have occurred: • An end-of-form (EOF) • A paper jam • A cover open • A hardware error • A data transmission error • An interface mode error • A Power-On Self Test (POST) failure.
Auto Gap (Green)	Auto Gap is on. Auto Gap automatically adjusts the printer according to the thickness of the paper you are using.
Tractor2 (Green)	The Tractor 2 Feeder is selected. (The Tractor 2 Feeder option must be installed.)

2. Diagnostic Information

Start

Make a quick visual check for defects (loose or broken parts, unplugged connectors, or paper jams).

If there is no power after turning the printer on, go to the “Power Failure Service Check” on page 2-25.

If an error indicator appears, go to the “Error Indication Table” on page 2-2 and take the indicated action.

Run the “Print Test” on page 3-5 and refer to the “Error Log” on page 3-6 for details of error indication information. If no error indication appears, refer to the “Symptom Table” on page 2-4.

Error Indication Table

The following table describes the service check entries for the printer error indication codes.

When an error indication changes after you have entered a service check, you have an intermittent problem. If this occurs, leave the service check and go to "Symptom Table" on page 2-4.

Display Indication	Description / Action
631 Machine Check Display RAM Error	Display RAM Read/Write Error. This error is detected only during POST. Replace the operator panel.
632 Machine Check System RAM Error	System RAM Read/Write Error. Replace the main logic board and adjust the "Bidirectional Print Adjustment" on page 4-4. Check the "Printhead-to-Platen Gap Adjustment" on page 4-2.
633 Machine Check Timer Interrupt Error	Timer Interrupt Controller Error. Replace the main logic board and adjust the "Bidirectional Print Adjustment" on page 4-4. Check the "Printhead-to-Platen Gap Adjustment" on page 4-2.
636 Machine Check NOVRAM Error	Non-Volatile Memory Read/Write Error. Replace the main logic board and adjust the "Bidirectional Print Adjustment" on page 4-4. Check the "Printhead-to-Platen Gap Adjustment" on page 4-2.
637 Machine Check CA Drive Error	Home Timeout Error. Go to the "Carrier Drive Service Check" on page 2-14.
638 Machine Check CA Drive Error	Carrier Drive Error. No emitter pulse detected. Go to the "Carrier Drive Service Check" on page 2-14.
639 Machine Check CA Drive Error	Carrier Drive Error. Carrier positioning error. Go to the "Carrier Drive Service Check" on page 2-14.
63B Machine Check Key Scan Error	Button Scanning Error. Go to the "Operator Panel Service Check" on page 2-19.

Display Indication	Description / Action
63C Machine Check Auto Gap Error	Auto Gap Error. Go to the “Auto Gap Service Check” on page 2-10.
63D Machine Check Tractor2 HP Error	Tractor 2 Home Position Error. Go to the “Tractor 2 Service Check” on page 2-31.
63E Machine Check Head Thermal Error	Head Thermal Sensor Error. Go to the “Print Wire Drive Failure Service Check” on page 2-28.
63F Machine Check Option RAM Error	Option RAM Read/Write Error. Replace the 32Kb Memory Module.
640 Machine Check CA Thermal Error	Carrier Thermal Sensor Error. Go to the “Carrier Drive Service Check” on page 2-14.

Symptom Table

1. Select the symptom that best describes the problem.
2. Perform the appropriate action before you go to the indicated service check.

Abnormal Indications

Symptom	Action
All LEDs turn on but do not turn off. The **Power** LED is on, but POST will not run.	Disconnect the interface cable from the printer and turn the printer off and then on. If POST now runs correctly, the problem is in the computer or interface cable. Go to the "POST Service Check" on page 2-24.

Abnormal Print Operation Problems

Symptom	Action
Printer will not print, or become Ready. Abnormal operation, incorrect characters, or incorrect line width. Printer is ready but will not print from the computer correctly. Undefined or incorrect characters.	Be sure the interface cable is connected properly. Go to the "No Print or Abnormal Print Service Check" on page 2-18.

Auto Sheet Feeder Problems

Symptom	Action
Auto sheet feeder will not feed paper. Auto sheet feeder double feeds. Auto sheet feeder has intermittent feed problems. Paper Skews	Be sure Auto Sheet Feed is set to **On** in the Paper Handling Option Menu. Be sure the paper select lever is in the cut sheet position. Go to the "Auto Gap Service Check" on page 2-10. Isolate the problem by removing the auto sheet feeder and feeding paper, using the manual feed tray. Go to the "Auto Sheet Feeder (ASF) Service Check" on page 2-12.

6XX Error Indications

Symptom	Action
6XX Machine Check is displayed.	Turn the printer off and then on. Go to "Error Indication Table" on page 2-2.

Paper Feed Problems

Symptom	Action
Paper Empty Add Paper is displayed with paper in the printer. Print operation starts without paper.	Be sure the paper empty sensor is not blocked. There may be a problem with the paper select sensor. Go to the "Paper Feed Service Check" on page 2-20.

Symptom	Action
Load/Unload does not function. Form feed length is not correct. **Load/Unload** functions with cut sheets in use.	Be sure the paper select lever is in the correct position. There may be a problem with the paper select sensor. Go to the "Paper Feed Service Check" on page 2-20.
Paper feeds, but Auto Loading does not work.	Be sure the paper select lever is in the cut sheet position. Be sure Auto Cut Sheet is enabled in the Paper Handling Option Menu. Go to the "Paper Feed Service Check" on page 2-20.
Lower feed roll shaft rotates, but paper does not feed. Pressing **Form Feed** does not feed paper. Abnormal noise while feeding. Paper jams, skews or creases. Incorrect or no line spacing: wider, narrower, or overlapping lines. Incorrect Top of Form positioning.	Be sure the paper select lever is in the correct position. Go to the "Paper Feed Service Check" on page 2-20.

Operator Panel Problems

Symptom	Action
Start/Stop does not function but no error is indicated. Only the **Power** light turns on. One or more buttons do not function. One or more lights do not function. Blank display. Cover open displayed.	Turn the printer off and then on. Go to the “Operator Panel Service Check” on page 2-19.

Power Problems

Symptom	Action
When the power switch is on, the **Power** light does not turn on or the printer does not start. The **Power** light blinks or changes intensity.	Check the continuity of the power cord and the voltage of the electrical outlet. Go to the “Power Failure Service Check” on page 2-25.

Print Quality Problems

Symptom	Action
No print, but carrier moves as if printing.	Be sure the printhead cables are not loose or damaged. Be sure the interface cable is connected properly. Check the ribbon cartridge for binds or damage. Go to the “Print Wire Drive Failure Service Check” on page 2-28.
Print density is light.	If the ribbon has reached its end of life or is worn, the ribbon cartridge needs to be replaced. Go to the “Auto Gap Service Check” on page 2-10. If no problem is found, go to the“Ribbon Drive Service Check” on page 2-30.
Uneven print density across the print line. Specific dots missing.	Be sure the printhead cables are connected correctly to the printhead and the sub logic board. Clean the printhead. Set the Auto Gap to **On** in the user menus and run the print test. If the print is light at one edge and uniformly gets darker across the page to the other edge, perform the “Printhead-to-Platen Gap Adjustment” on page 4-2. Go to the “Print Wire Drive Failure Service Check” on page 2-28.
Scattered ink smearing, blurred characters. Fuzzy print.	Clean the printhead nose. Clean the ribbon guide and shield. If the ribbon has reached its end of life or is worn, the ribbon cartridge needs to be replaced. Go to the “Print Quality Service Check” on page 2-27.

Symptom	Action
Wavy vertical lines, uneven left margin or character width is reduced.	Clean and lubricate the carrier shaft. If the carrier drive belt is worn or broken, replace the carrier unit. Check the “Bidirectional Print Adjustment” on page 4-4. Go to the “Carrier Drive Service Check” on page 2-14.

Ribbon Feed Problems

Symptom	Action
Ribbon comes off, becomes loose or folded, or jams. Ribbon feeds correctly but is noisy.	Check the ribbon cartridge for binds or damage. Go to the “Ribbon Drive Service Check” on page 2-30.

Service Checks

Auto Gap Service Check

Theory of Operation:

The Auto Gap Motor and Gap Home Sensor automatically set the printhead gap for the thickness of paper being used by rotating the eccentric carrier shaft. The printer detects maximum gap with the Gap Home Sensor, and minimum gap by driving the printhead against the platen. In addition to compensating for the thickness of the paper itself, the printer must increase the air gap for thicker papers.

With Auto Gap On, the following occurs:

- POST.
- Auto Gap resets.
- The printer unloads paper if it is loaded, to prepare to measure the travel span.
- The auto gap motor drives the printhead against the platen to measure the total travel span.
- Auto Gap resets again, to make room for paper to be loaded.
- The paper feeds to the print line.
- The auto gap motor drives the printhead against the paper to measure the total travel span minus the paper thickness.
- Auto Gap resets again.
- The printhead moves to the appropriate gap position for the installed paper.
- The Ready LED turns on, the carrier centers, and the paper moves to the tearoff position.

Auto Gap can be set to Off to reduce time-to-print if the printer is always used with a single type of paper. With Auto Gap Off, the gap can be set to Manual Position 1 (thinnest paper) to 7 (thickest paper). With Auto Gap Off, Single Auto Gap has two selections:

- Fixed - the printhead gap is never changed.
- Open - the gap is opened when loading forms.

Note: If there is a 63C Auto Gap Error, the gap home sensor did not detect that the carrier shaft homed, or detected that the carrier shaft homed at the wrong time.

	FRU	Action
1	Auto Gap Sensor	Inspect the gap home flag on the end of the carrier shaft and make sure it blocks the sensor when the gap is at its largest. Power up the printer and watch the carrier shaft and the gap home flag. If the shaft rotates before the error occurs, the sensor may have failed. Perform the Sensor 2 Test in the Service Menu and test the gap home sensor.
2	Auto Gap Motor Gear Train	If the carrier shaft does not rotate, look for an auto gap motor or auto gap gear train problem. Disconnect CN20 from the main logic board. Check the resistance of pins: 1 and 5, 2 and 6, 3 and 5, and 4 and 6. All resistances should be 180 ± 5 ohms. No pin should have continuity to ground. If there is no 63C Auto Gap Error but there is a gap problem (light print or no print, or paper catching on the printhead or ribbon shield), enter the user menus to make sure the gap settings are appropriate for the paper being used. If Auto Gap is Off, Manual Position 1 should be used only with single-part 16 lb. or 20 lb. forms. Refer the customer to the user's guide for the appropriate Manual Position settings.

Auto Sheet Feeder (ASF) Service Check

Auto Sheet Feeder Principles of Operation

The auto-sheet feeder (ASF) feeds into the cut sheet paper entry throat. To use the ASF:

- The paper select lever must be set to cut sheet.
- Auto Sheet Feeder must be selected in the display menu.

Continuous forms can be used with the ASF installed by moving the paper select lever to continuous forms and pressing Start to feed the continuous forms to the first print line.

The ASF contains no electrical parts. It is driven from the gear on the inside of the printer's right side frame.

The combination lock mechanism is a clutch that causes the ASF pick rollers to feed only one sheet of paper at a time. When **Auto Sheet Feeder** is selected on the Paper Handling Options Menu, the cut sheet paper drive reverses itself for a short distance during paper loading. This engages the clutch and engages the paper pick rollers, which feed the top sheet from the cut sheet paper stack. The sheet is fed about 5 inches (125 mm) and the paper path briefly reverses again; this disengages the clutch and the pick rollers. The sheet is then fed to the print line by the ASF's upper and lower feed rollers and the printer's lower feed rollers. Although the ASF pick rollers continue to turn as the paper is fed, their drive is disengaged and they are actually being turned by the paper.

	FRU	Action
1	Paper Select Sensor	With the paper select lever in the cut sheet position, do the following: • Try to load a sheet with Load/Unload. (This button should not work) • If the paper loads go to the "POST Service Check" on page 2-24.

	FRU	Action
2	Paper Feed	If the paper does not feed, do the following: • Remove the ASF. • Be sure the base printer feeds paper correctly. • If it does not feed paper correctly, go to the "Paper Feed Service Check" on page 2-20.
3	Gear Train	Be sure the ASF drive gear on the inside of the printer's right frame rotates. Inspect the right side gear train for damage or debris. Remove the ASF right cover and ensure that all gears are in good condition.
4	Combination Lock Mechanism	Install the ASF and press **FormFeed**. If the pick drive shaft does not rotate, replace the combination lock mechanism.
5	Left and Right Hoppers	If the ASF pick rollers rotate but a single sheet is not picked, inspect the springs and corner separators on the left and right hoppers. Make sure the paper load lever is in the correct position.
6	Pick Rollers Paper Guides Feed Rollers	Paper skew can be caused by worn, dirty or binding pick and feed rollers. Remove the auto sheet feeder, load paper and hand cycle the feeder while observing the pick and feed rollers. If the skew problem is in the base machine, examine all feed rollers for wear.

Carrier Drive Service Check

Note: When a 637, 638 or 639 error is detected while printing, verify that the same error is detected after removing jammed paper and checking that the ribbon guide is in place.

	FRU	Action
1	637, 638, 639 CA Drive Error	Carrier positioning error. Inspect the following: • Tension pulley plate • Carrier • Carrier belt. Loosen and tighten the tension pulley plate screws to make sure the carrier belt is tight. Disconnect CN9 and move the carrier manually from left to right and check for smooth movement. With CN9 disconnected, check for 5 to 8 ohms between pins 1 and 2 on the motor cable. If the reading is incorrect, replace the motor. Check for motor pins shorted to the housing. If you find a pin shorted to the housing, replace the motor. If no problems are found replace the carrier motor.
2	640 CA Thermal Error	The printer has stopped to protect the carrier motor from overheating. Normally this will not occur until after several hours of continuous heavy use in a warm environment, and only then after going through several stages of thermal slowdown. Wait for the machine to cool and see if the error goes away. If the machine was not being used heavily before the error occurred, or if the error returns when the machine is cool, replace the carrier motor.

Intermittent Problem Service Check

	FRU/Symptom	Action
1	The machine sometimes fails before POST is complete.	Check for the following: 1. Loose connectors. Reconnect all connectors to the main and sub logic boards. 3. Electrical noise or static discharge. Check the following items: • Power supply ground. • Machine frame ground. • Printer interface cable is grounded and shielded. 2. Intermittently low voltages. Check for ac and all dc voltages and short circuits on the main and sub logic boards. a. Check the electrical voltage and ensure that it is within tolerance. b. Check the continuity of the power cord. c. Disconnect the power supply cable from the connectors CN11 on the main logic board and CN1 on the sub logic board. Turn the printer power on and check all dc output voltages at CN11 and CN1. Ensure the output voltages are: CN11-1 (+40 ±4 V dc) & CN11-3 (GND) CN11-2 (+40 ±4 V dc) & CN11-3 (GND) CN11-5 (+5 ±0.5 V dc) & CN11-6 (Signal GND) CN 1-1 (+40 ±4 V dc) & CN1-3 (GND) CN 1-2 (+40 ±4 V dc) & CN1-3 (GND) CN 1-5 (+5 ±0.5 V dc) & CN1-6 (Signal GND) If the voltages are not correct, replace the Power Supply Unit. If the failure remains, replace the main logic board and sub logic board. **Note**: When replacing the main logic board, always set the “Bidirectional Print Adjustment” on page 4-4 and the “Printhead-to-Platen Gap Adjustment” on page 4-2.

	FRU/Symptom	Action
2	Machine power sometimes turns off.	The cause of this problem may be that the power circuit is failing, or the wiring is intermittently open. Check the following in sequence: 1. Check the electrical voltage and be sure it is within tolerance. 2. Check the continuity of the power cord. 3. Disconnect the power supply cable from the connectors CN11 on the main logic board and CN1 on the sub logic board. Turn the printer power on and check all dc output voltages at CN11 and CN1. Be sure the output voltages are as follows: CN11-1 (+40 ±4 V dc) & CN11-3 (GND) CN11-2 (+40 ±4 V dc) & CN11-3 (GND) CN11-5 (+5 ±0.5 V dc) & CN11-6 (Signal GND) CN 1-1 (+40 ±4 V dc) & CN1-3 (GND) CN 1-2 (+40 ±4 V dc) & CN1-3 (GND) CN 1-5 (+5 ±0.5 V dc) & CN1-6 (Signal GND) If one of the voltages is 0, go to the “Power Failure Service Check” on page 2-25. If the voltages are not 0 but are incorrect, replace the power supply unit.
3	Intermittently poor print quality.	Do the following: • Remove paper jams from the paper path. • Clean all feed roller surfaces. • Clean the ribbon shield and printhead. • Clean the platen surface. • Install the ribbon cartridge correctly. • If the ribbon end of life has been reached, have the customer replace the ribbon cartridge.

	FRU/Symptom	Action
4	If the prior suggestions have not corrected the problem.	The service check has not defined the failure, or the machine is having intermittent failures. The following may cause undefined or intermittent failures: 1. Customer's electrical voltage. Be sure that it is within the tolerance. 2. Loose connector pins or keys that fail to contact. Check the following: a. Reconnect the connectors of all FRUs and printer interface cables. b. Check the continuity of the line cord. 3. Electrical noise. Check the following: a. Power supply ground. b. Machine frame ground. c. Printer interface cable is grounded or shielded. 4. Undefined data in customer applications. Check the baud rate at the controller. Check that the printer interface cable matches the printer.
5	Problem occurs only in specific customer applications.	Perform the Trace Print (hexadecimal printing) by the following procedure and check the data streams. 1. Press **Menu**. 2. Press **Item** ↑ to display Trace Mode. 3. Press **Start**. 4. Have the customer print the failing job. 5. To stop printing, turn the power switch off. If the failure still occurs, set the "Bidirectional Print Adjustment" on page 4-4 and the "Printhead-to-Platen Gap Adjustment" on page 4-2.

No Print or Abnormal Print Service Check

	FRU/Function	Action
1	Carrier	If the carrier moves, but nothing is printed, go to the “Print Wire Drive Failure Service Check” on page 2-28.
2	Configuration	Enter the user menus and be sure the correct emulation (IBM/EPSON) and interface (parallel/serial) are selected. If the printer is serially attached, be sure the RS232/RS422 switch is in the correct position, and the host communications parameters are correct.
3	Main Logic Board	If the Print Test does not print, or prints incorrectly, do the following: • Replace the main logic board. • Set the “Bidirectional Print Adjustment” on page 4-4 and the “Printhead-to-Platen Gap Adjustment” on page 4-2.

Operator Panel Service Check

Note: Press any button except **Start/Stop**, **Load/Unload,** or **FormFeed.** If “Operator Panel Disabled” is displayed, unlock the operator panel by powering up with the **Micro**↑ and **Micro**↓ keys pressed. Use the same procedure to re-lock the panel after service is complete.

	FRU	Action
1	Operator Panel	If there is a 631 Display RAM Error, replace the operator panel. If there is a 63B Key Scan Error, one or more buttons are being detected as pressed during power-up. Replace the operator panel.
2	Printer Cable Operator Panel	During power-up, all LEDs and all LCD pels should turn on briefly. Enter the Service Menu and perform the Button Test. If there are missing or extra pels displayed, or if any of these tests fail, check the condition and continuity of the operator panel cable. Replace the cable or the operator panel.
3	Cover Switch	If **Cover Open** is displayed, check the cover switch. Jumper the cover switch connector on the operator panel. If **Cover Open** is displayed, check the condition and continuity of the operator panel cable. Replace the cable or the operator panel.
4	Main Logic Board	If the symptom has not changed, replace the main logic board.

Paper Feed Service Check

Note: If the problem is frequent jams or paper creases, verify that the paper is neither very thick nor very thin. If necessary refer the customer to the User's Guide for specifications of acceptable papers.

	FRU / Symptom	Action
1	Auto Sheet Feeder	If the Auto Sheet Feeder is installed, remove it. Enter the Paper Handling Options Menu and set "ASF" to off. Verify that the machine works correctly without the ASF installed. If the printer fails only with the Auto Sheet Feeder installed, go to the "Auto Sheet Feeder (ASF) Service Check" on page 2-12.
2	Tractor 2	If the Tractor 2 option is installed, remove it. Verify that the machine works correctly without Tractor 2 installed. If the printer fails only with Tractor 2 installed, go to the "Tractor 2 Service Check" on page 2-31.
3	Paper Feed Motor	If there is no paper motion, disconnect the paper feed motor connector CN10 from the main logic board. Check the resistance of pins: CN-1 and 6, 2 and 5, 3 and 6, and 4 and 5. All resistances should be 5.8 ± 0.5 ohms. No pin should have continuity to ground.

	FRU / Symptom	Action
4	Gear Train and Paper Feed Motor	Remove all paper from the machine. Press **FormFeed** several times and examine all rotating parts to find the problem. For better visibility, remove the covers and reconnect the operator panel to the main logic board. The upper and lower feed rollers and the upper and lower pinch rollers should all be clean and in good condition, and should all rotate during Form Feed. To turn the gear train manually, turn the right end of the lower feed roller shaft with a 6 mm wrench.

	FRU / Symptom	Action
5	PE Sensor TOF Sensor PSet Sensor Jam Sensor	The printer has four sensors in the paper path, plus one which detects the position of the paper select lever. Enter the service menu and perform the sensor tests. • PE Sensor - rounded flag, detects the presence of paper at the platen. • TOF Sensor - sharp flag, determines TOF at paper load. • PSet Sensor - paper set, detects presence of paper in the tractors and looks for end of forms. • Jam Sensor - senses the holes in the paper and detects paper jams by the lack of paper movement. When the PSet sensor detects EOF, it lets printing continue to the bottom of the form. When the PE sensor detects no paper, it stops print within a few lines. The jam sensor stops printing after about 50 mm of no signal change; for example, if 50 mm of pinfeed is removed from a sheet, the sensor stops printing. Less than 50 mm will probably be ignored. Therefore, the paper motion must have stopped for the equivalent of about 12 printed lines to cause a jam. If either the PE or the PSet sensor detects no paper during print, printing stops at the end of the current page. The Tractor 2 option also has PSet and Jam sensors on the left tractor. Enter the service menu and perform the sensor tests. Replace any failed or damaged sensors.
6	Paper Select Sensor	Enter the service menu and perform the Sensor Test 2 for “Lever.” Move the paper select lever to test the sensor. Replace any sensor if failed or damaged.

	FRU / Symptom	Action
7	Operator Panel	If paper does not move at all, verify the **FormFeed** button is working correctly by performing the service menu button test.
8	Main Logic Board	If no other problem is found, replace the main logic board. Set the “Bidirectional Print Adjustment” on page 4-4, and “Printhead-to-Platen Gap Adjustment” on page 4-2.

POST Service Check

	FRU	Action
1	Power	Disconnect the parallel or serial cable and turn power on. If there is no printer activity, go to the “Power Failure Service Check” on page 2-25.
2	Operator Panel	If the power supply fan turns on but no LEDs light, go to the “Operator Panel Service Check” on page 2-19.
3	Main Logic Board	If the Power LED turns on but POST does not complete, replace the main logic board. Readjust the “Bidirectional Print Adjustment” on page 4-4 and check the “Printhead-to-Platen Gap Adjustment” on page 4-2.
4	Printer Cable	If POST completes, reconnect the parallel or serial cable and turn power on again. If POST now fails, there is a problem with the cable, or the parallel connector on the main logic board.

Power Failure Service Check

Refer to the “Voltage, Ground, and Continuity Readings” on page 1-3, for additional information.

	FRU	Action
1	Operator Panel	If the operator panel or cable is damaged or disconnected, the machine is completely inoperable, except for the power supply fan noise. If the power LED is not on steady, check the cable continuity and replace the cable or the operator panel.
2	Power Supply Fuse	If the printer is completely inoperable, disconnect the power cables from the main logic board (CN11) and the sub logic board (CN1). Turn the power on and measure +5 ± 0.5 V dc at the sub logic board cable CN1-5 and +40 ± 4 V dc at CN1-1 and CN1-2. If there is no voltage, check the internal fuse before replacing the power supply. A 634 Power Failure indicates that the +5 V dc is OK but the +40 V dc is not. Power the printer off, wait 10 seconds, and power back on. If the 634 reappears either the power supply has failed or there is a short in a motor that uses +40 V dc.

	FRU	Action
3	Ribbon Motor Paper Feed Motor Carrier Motor Sub Logic Board 4227-200 Carrier Motor Cooling Fan	Disconnect the carrier motor (CN9 and CN15), the paper feed motor (CN10), ribbon motor (CN19) and the (4227-200) carrier motor cooling fan (CN17) from the main logic board, and disconnect the power connector CN-1 from the sub logic board. Turn the power on again. If there is still a power problem, replace the main logic board. If the machine posts a different error, one of these items is shorted and is holding down the +40 V dc line. Reconnect them one at a time, turning the printer on in between each connection. Replace the item that causes the power failure.
4	Printhead Cables Printhead	Disconnect the printhead cables from the sub logic board and turn the printer on. If the power LED lights correctly only with the printhead cables disconnected from the sub logic board, there is a short in the printhead or printhead cables.
5	Main Logic Board	If all the above items have been examined and there is still a power problem, replace the main logic board. (Retain the old board for reinstallation if the problem is not fixed.) Adjust the “Bidirectional Print Adjustment” on page 4-4 and check the “Printhead-to-Platen Gap Adjustment” on page 4-2.

Print Quality Service Check

	FRU	Action
1	Ribbon and Shield	Be sure the ribbon is not worn and feeds smoothly when the knob is turned. Inspect the ribbon shield for dirt or damage.
2	Ribbon Drive	Be sure the ribbon drive post rotates when printing.
3	Auto Gap Auto Gap Motor Bracket	Check the “Printhead-to-Platen Gap Adjustment” on page 4-2. If Auto Gap is off, be sure the manual position setting is appropriate for the paper used. If the failure remains, replace the Auto Gap Motor Bracket.
4	Printhead Cables	Inspect both ends of the printhead cables for proper connection.
5	Carrier Belt Adjustment	Loosen and tighten the tension pulley plate screws to make sure the carrier belt is tight.
6	Carrier Movement	With power off, manually move the carrier from side to side to inspect for drag or binds.
7	Bidirectional Print Adjustment	Check the “Bidirectional Print Adjustment” on page 4-4.
8	Carrier Motor	The carrier motor should turn smoothly and quietly when printing.
9	Paper Feed Gears	Inspect the paper feed gears for wear and tear.
10	Paper Feed Motor	The paper feed motor should turn smoothly and quietly when printing.
11	Tractors	Inspect the tractors for damage or looseness.
12	Feed Roller Surfaces	Inspect the feed roller surfaces for dirt or wear.

Print Wire Drive Failure Service Check

	FRU/Symptom	Action
1	Missing Dots Carrier moves, but no printing or printhead sound.	Perform the print test to determine which wires are not printing. Disconnect the printhead cables from the sub logic board and check the resistance for the affected wires. The resistance for each wire should be around 8.5 ohms. Left Bank / Right Bank Wire 1 CN3-11 & CN3-18 CN3- 9 & CN3- 4 Wire 2 CN4-11 & CN4-20 CN4- 9 & CN4- 2 Wire 3 CN3-13 & CN3-16 CN3- 7 & CN3- 6 Wire 4 CN4-13 & CN4-18 CN4- 7 & CN4- 4 Wire 5 CN4-15 & CN4-16 CN4- 5 & CN4- 6 Wire 6 CN4-17 & CN4-14 CN4- 1 & CN4- 8 Wire 7 CN3-15 & CN3-14 CN3- 3 & CN3- 8 Wire 8 CN4-19 & CN4-12 CN4- 3 & CN4-10 Wire 9 CN3-17 & CN3-12 CN3- 5 & CN3-10 **Note:** 4227-200 connectors will be CN1 and CN2. If the resistance for the affected wires is incorrect, disconnect the printhead cables from the printhead and measure the resistance of the printhead for the same wires. The resistance should be around 7.9 ohms. • If the resistance is correct, replace the printhead cables. • If the resistance is incorrect, replace the printhead.
2	63E Head Thermal Error	The printer has stopped to protect the printhead from overheating. Normally this occurs after several hours of continuous heavy use in a warm environment, and only then after going through several stages of thermal slowdown. Wait for the machine to cool and see if the error goes away. If the machine was not being used heavily before the error occurred, or if the error returns when the machine is cool, replace the printhead.

	FRU/Symptom	Action
3	Auto Gap	If printhead is firing, manually rotate the carrier shaft during printing by pushing down on the auto gap home sensor flag. If printing starts and is correct, go to the "Auto Gap Service Check" on page 2-10.
4	Printhead Cables	Inspect for improper connection or damage.
5	Sub Logic Board	If there is carrier motion but no printhead noise, and the printhead cables do not appear to be the problem, replace the sub logic board.
6	Ribbon	A problem with the ribbon shield can keep the print wires too far from the page. Inspect the ribbon shield. When the printer is Ready with the ribbon installed, make sure the ribbon shield can float slightly front to back.
7	Printhead	The printhead probably is not the problem if there is no printing. Check the winding resistances as described above and look for open circuits or shorts between neighboring pins. Do not replace the printhead unless a specific problem is found.
8	Main Logic Board	If no other problem is found, replace the main logic board, retaining the old board for reinstallation if the problem is not fixed. Set the "Bidirectional Print Adjustment" on page 4-4 and the "Printhead-to-Platen Gap Adjustment" on page 4-2.

Ribbon Drive Service Check

In normal operation, the ribbon knob rotates counterclockwise whenever the carrier moves to the left.

	FRU/Symptom	Action
1	Ribbon Drive Gear Train	Remove and inspect the ribbon. Make sure the knob turns with even, moderate force and the ribbon feeds correctly. Inspect the gear train from the ribbon motor to the ribbon drive post. Check the “Printhead-to-Platen Gap Adjustment” on page 4-2.
2	Ribbon Motor	If printing seems normal, but the ribbon is not moving, remove the ribbon and turn power on. The ribbon drive post should turn several times during POST. Disconnect the ribbon motor connector CN19 from the main logic board. The winding resistance should be 118 ohms ± 5 between pins: 1 and 5, 3 and 5, 2 and 6, 4 and 6. Pin 5 should show an open circuit to pins 2, 4 and 6. Pin 6 should show an open circuit to pins 1, 3, and 5.

Tractor 2 Service Check

The Tractor 2 sensor opens during installation, when its actuator touches the printer cover. The home sensor detects the position of the slider.

- When Tractor 2 is selected, the motor-driven Tractor 2 slider pushes the printer sub slider cam lever to engage the printer gear train which drives the Tractor 2 tractors.
- When the Tractor 2 is deselected, the motor retracts the slider, disengaging the Tractor 2 gear drive and reengaging the printer tractors.

63D Tractor2 HP Error

The Tractor 2 home sensor was never initialized after turning the printer off and then on, or made at the wrong time.
(The same error indication is used for carrier home failure.)

	FRU	Action
1	Tractor 2 Home Sensor	Remove the Tractor 2 and turn the printer off and then on again to determine if the fault is in the printer or Tractor 2. If the gear teeth chatter just before the error is displayed, replace the home sensor.

	FRU	Action
2	Main Logic Board	Remove Tractor 2 from the printer but leave the cable connected. Make sure the slider (the black plastic piece just above the right cover) moves after turning the printer off and then on. If the slider does not move after turning the printer off and then on: • Make sure the slider and gear train are properly connected and move freely with the power off. • Make sure the Tractor 2 board is receiving: +26 V dc on CN1-1 and + 5 V dc on CN1-5. If not, check the cable connection and the voltages at main logic board CN13-1. The upper right pin at CN13 is pin 1 (+26 V dc) and the pin just beneath it is pin 5 (+5 V dc). If these voltages are not present replace the main logic board.
3	Tractor 2 Motor Board /Cable Asm	Check the following resistances of the Tractor 2 motor windings: 101 ± 5 ohms between pins: 1 and 6, 3 and 6, 2 and 5, 4 and 5. If the motor is good, replace the board/cable assembly. For information on the Tractor 2 cable connectors, see “Tractor 2 Cable Connectors” on page 5-21.

Tractor 2 installed, but not shown in User Menu

Tractor 2 selected from operator panel but printer does not detect Tractor 2 or detects that the Tractor 2 mechanism is not installed.

Power the printer off and reinstall the Tractor 2. Power the printer on and verify the problem still occurs.

	FRU	Action
1	Tractor 2 Board/Cable Asm.	Check the Tractor 2 sensor or the cable connection. The sensor actuator extends through the Tractor 2 cover and rests on the printer cover when Tractor 2 is installed. Remove the Tractor 2 cover and make sure the sensor opens when the Tractor 2 is installed. The voltage at Tractor 2 CN1-13 should be +5 V dc with the sensor open and 0 with it closed. Replace the Tractor 2 board/cable asm if the sensor signal is wrong. For information on the Tractor 2 cable connectors, see “Tractor 2 Cable Connectors” on page 5-21.
2	Main Logic Board	Check the cable connection from Tractor 2 to the printer. If possible, try the Tractor 2 with another printer to determine if the problem is the Tractor 2 board/cable assembly or the printer main logic board.

Paper Feed Problems

	FRU	Action
1	Tractor 2	On the printer, make sure the Tractor 2 driving gear turns freely when the white sub slider cam is not pressed. Be sure the driving gear does not move when the sub slider cam behind the gear is pressed. Remove Tractor 2 from the printer and remove all paper. With the paper select lever in the continuous forms position, press **LineFeed**; the tractors should rotate. Press the sub slider cam below the ASF/ Tractor 2 drive gear and press **LineFeed** again; the tractors should not rotate but the drive gear should. Check the condition of the pin feed belts. With the power off, make sure the slider does not bind. Verify: • When the slider is to the rear, the white gear drives the tractors; • When the slider is to the front the gear and tractors are not connected. Remove the Tractor 2 cover and reinstall Tractor 2 in the printer (if necessary remove the printer covers also). Note that the small idler gear just below the slider is held in place by the cover; with the cover removed it will tend to move off the stud. Also note that when operating the Tractor 2 with the printer cover removed, the Tractor 2 sensor must be held open. Turn the printer on and look for mechanical problems. For information on the Tractor 2 cable connectors, see “Tractor 2 Cable Connectors” on page 5-21.

3. Diagnostic Aids

The printer contains self tests to help find and solve problems. You need not connect the printer to a computer or terminal to run these tests.

Types of self tests are as follows:

- Power-On Self Test (POST)
- Hex Trace Mode (a computer or terminal is needed)
- Print Tests
- Error Log

Power-On Self Test (POST)

The Power-On Self Tests diagnose the basic hardware printer functions and initialize the default value settings. POST starts automatically when power to the printer is turned on, or when the printer receives an INIT signal from the controller.

- Power supply fan turns on.
- LED Test - All LEDs turn on briefly.
- LCD Test - All pels of the display are activated twice, then "initialize" is displayed.
- RAM Test - Checks that the CPU can write/read the RAM.
- ROM Test - Checks that the ROM data is correct.
- Timer/Interrupt Controller Test - Checks this function is working.
- Button Scan Test - Scans all operator panel buttons.
- NVRAM Test - Checks that the NVRAM data is correct.
- Ribbon motor feeds ribbon.
- Carrier moves to the left side frame and back to the right.
- Auto Gap sequence occurs.

If any errors occur during the POST tests, an error indicator shows which test failed. See “Start” on page 2-1.


Hex Trace Mode

The hex trace mode can help the user test and troubleshoot programs. You can use the hex trace procedure to get a hexadecimal printout of the data stream sent to the printer. All data, including control and character data, print in hexadecimal instead of ASCII.

To activate hex trace mode:

1. Press **Menu**.
2. Press **Item** ↓ until **Trace Mode** is shown on the operator panel.
3. Press **Start**.

Hex Trace Mode Sample

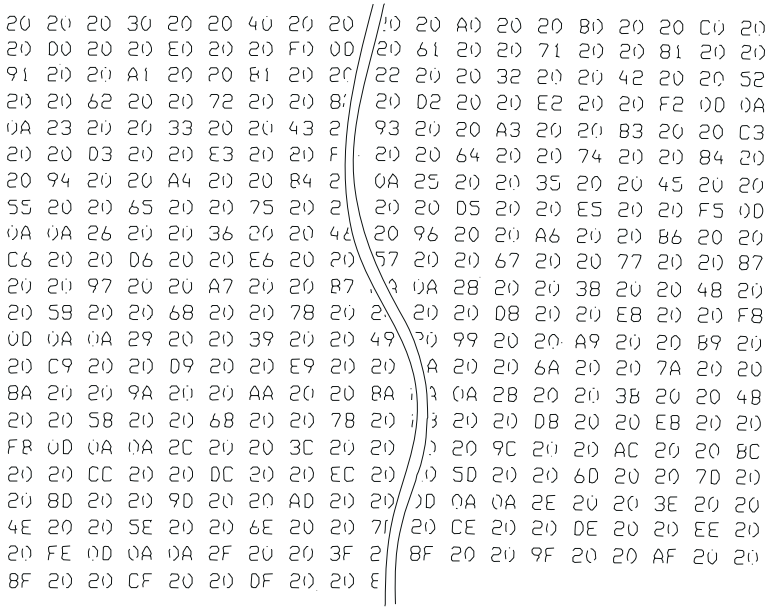

Interface Selection (4227-100)

Serial or parallel attachment can be selected from the user menu under Interface Options. If serial attachment is selected, RS-232 or RS-422 can be selected with the switch that is accessible through the rear cover. Serial attachment parameters are set in the Interface Options menu.

Operation with the Top Cover Removed

After removing the top cover, the printer can be operated for service purposes by positioning the cover near the main logic board and reconnecting the operator panel cable. The ribbon cover must be in place on the top cover. Or, remove the operator panel and cable, jumper the two pins of the ribbon cover sensor connector CN1 together on the back of the panel, and reconnect the operator panel flex cable to the main logic board.

Note: Printing without the top cover affects print quality and may cause paper jams since the upper feed rollers on the ribbon cover do not help restrain and feed paper.

Service Menu

Enter the Service Menu by pressing **Menu/Quit** during POR.

Release the button when the carrier strikes the left side frame. Exit the service menu by pressing **Menu/Quit**.

- Sensor Test 1: Tests PSet, Jam, PE & TOF sensors.
- Sensor Test 2: Tests Paper Select, Gap Home, and Cover sensors.

These tests display an underline (_) if the sensor is open or a block (■) if the sensor is blocked. Use paper, tools or fingers to block and unblock the sensors to verify that each is functional. Return to the Service Menu by pressing **Menu/Quit**.

Button Test

Pressing each operator panel button causes the alarm to beep. Pressing multiple buttons simultaneously results in no beep. Return to the Service Menu by pressing **Menu/Quit**.

Factory Setting

Factory Setting allows the selection of the default page length and code page from U.S. defaults (11", Code Page 437, Character Set 1) to Non-U.S. defaults (12", Code Page 850, Character Set 2).

Printhead Bank

This allows the 18-wire printhead to be set to use the left bank only, the right bank only, or both banks (default). This allows the printer to continue to print with a damaged printhead or cable.

Jam / PSet Sensor Test

Enables or disables the PSet and Jam sensors on the left tractor.

Impact Force

Impact Force enables the striking force of the printhead pins to be changed. Three selections are possible.

- **Normal Auto:** This is the default value. Impact force of the printhead pins is adjusted automatically for paper thickness.
- **High:** This is the highest impact force and over rides the Normal Auto selection. High pin force is used to obtain clearer print on medium thickness forms. Leaving the printer in High can damage the printhead, especially if printing on single sheet forms.
- **Normal 1P:** Disables the automatic setting of the impact force. Normal 1P is used to print in normal force when thicker print media is used such as labels.

Log Clear

Clears the error log.

Print Test

The Print Test prints:

- The ASCII character set.
- A line from each print wire.
- The bidirectional print alignment pattern.
- The contents of NVRAM.
- The error log.

Other Print Tests

The following print tests are accessed outside the Service Menu:

- A draft only 8 inch wide continuous print test. This test is activated by turning the printer on with the **Load/Unload** and **LineFeed** buttons pressed.
- A draft only 13.6 inch wide continuous print test. This test is activated by turning the printer on with the **LineFeed** and **FormFeed** buttons pressed.

Note: These tests print a running page count at the bottom of each page. Use the **Start/Stop** button to start and stop the test. Other

buttons that are active during this test are the **Micro** ↓ or **Micro** ↑, **Load/Unload**, **LineFeed** and **FormFeed**.

Print Demo and the **Print Settings** page are accessed from the user menus. **Print Settings** prints Macro status and paper handling settings and prints 8 inches wide.

Error Log

The Error Log printout is part of the Service Menu test print page. Error indicators print on the top line of the Error Log and their corresponding counters print below. The error indicators are the last two digits of the "6XX Machine Check" display indication. An error indicator 00 indicates no errors are registered in the counter. Each new error appears in the left-most position and the previous error indicator shifts one position to the right. If the new error indicator is the same as the previous error indicator, the counter is increased by 1. The maximum count number for the same error is 256, and the counter remains at this value (X'FF'). No more than 16 most recent error indicators can be printed in the error log area.

4. Repair Information

This chapter contains adjustments and removal procedures. Whenever parts are replaced, make sure that all adjustments are correct by running diagnostics procedures and checking adjustments as needed.

Handling ESD-Sensitive Parts

Many electronic products use parts that are known to be sensitive to electrostatic discharge (ESD). To prevent damage to ESD-sensitive parts, follow the instructions below in addition to all the usual precautions, such as turning off power before removing logic boards:

- Keep the ESD-sensitive part in its original shipping container (a special “ESD bag”) until you are ready to install the part into the machine.
- Make the least-possible movements with your body to prevent an increase of static electricity from clothing fibers, carpets, and furniture.
- Put the ESD wrist strap on your wrist. Connect the wrist band to the system ground point. This discharges any static electricity in your body to the machine.
- Hold the ESD-sensitive part by its edge connector shroud (cover); do not touch its pins. If you are removing a pluggable module, use the correct tool.
- Do not place the ESD-sensitive part on the machine cover or on a metal table; if you need to put down the ESD-sensitive part for any reason, first put it into its special bag.
- Machine covers and metal tables are electrical grounds. They increase the risk of damage because they make a discharge path from your body through the ESD-sensitive part. (Large metal objects can be discharge paths without being grounded.)
- Prevent ESD-sensitive parts from touching other personnel. Install machine covers when not working on the machine, and do not put unprotected ESD-sensitive parts on a table.
- Keep all ESD-sensitive parts in a grounded metal cabinet (case).
- Low humidity increases static electricity during cold weather.

Adjustments

Printhead Installation Adjustment

1. Hold the printhead down while pressing it toward the platen and tighten the two printhead mounting screws.
2. Check the “Printhead-to-Platen Gap Adjustment” on page 4-2.

Printhead-to-Platen Gap Adjustment

Perform this adjustment:

- When the platen, printhead, carrier, carrier shaft, or main logic board is removed or replaced.
- When the print density varies across the page.

There are two adjustments to this procedure.

Printhead-to-Platen Gap Left and Right

1. Turn the power off.
2. Remove the top cover.
3. Remove the ribbon.
4. Position the carrier to the left.
5. Using a .014 inch (.35 mm) feeler gauge as the Go gauge and a .016 inch (.40 mm) feeler gauge as the No-Go gauge, rotate the carrier shaft and measure the printhead to platen gap.
6. Position the carrier to the right.
7. Adjust the carrier shaft bearing on the right side frame so the right gap matches the left gap.

Printhead-to-Platen Gap Electronic Setting

Be sure there is no paper in the printer.

1. Install a ribbon.
2. Hold down **FormFeed** and power on the printer.
3. Remove the ribbon guide.
4. Measure the printhead to platen gap. The gap specification is:
   - (4227-100) - between .013 inch (.33 mm) and .0165 inch (.42 mm).
   - (4227-200) - between .011 inch (.275 mm) and .015 inch (.375 mm).
5. Use the **Micro**↑ or **Micro**↓ to change the "Pos" setting. The **Micro**↑ button will increase the clearance and the **Micro**↓ button will decrease the clearance.
6. Install the ribbon guide.
7. Press **Start/Stop** to reset the gap to the new “Pos” setting.
8. Remove the ribbon guide and check the setting with a feeler gauge.
9. Repeat steps 5 through 8 until the gap is within the specification.
10. Press **Store** to save the setting in NVRAM.


Bidirectional Print Adjustment

Perform this adjustment whenever the main logic board, carrier, or printhead is replaced.This test is in the user menu and uses a line length corresponding to the right margin setting. Run the test at both the Draft speed setting and at the Courier speed setting.

The following steps illustrate how to adjust the alignment of the print wires, and assumes macros are disabled.


1. Load continuous forms.
2. Press **Menu**.
3. Press **Item** ↓ until **Print Adjust** appears on the display.
4. Press **Next** →.
5. Press **Item** ↓ or **Item** ↑ to choose Draft or Courier. Draft prints each alignment pattern once (uni-directional). Courier prints each alignment pattern twice (bidirectional).
6. Press **Start/Stop** to print the alignment pattern.

The following example shows a printer that needs alignment.

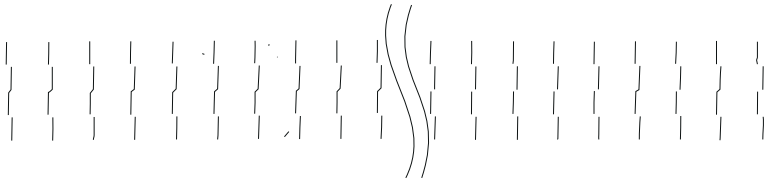

The message **Choose the Best Alignment** appears on the display.

7. Press **Next** → or **Prev.** ← to adjust the alignment.
   Lines 2 and 4 move to align with lines 1 and 3. The printer is aligned correctly when lines 2 and 4 are vertically aligned with lines 1 and 3.
   - Press **Item** ↑ to move lines 2 and 4 to the right.
   - Press **Item** ↓ to move lines 2 and 4 to the left.
8. Press **Store** to save the selected value.
9. Press **Start/Stop** to print the alignment pattern. The example below shows proper alignment.

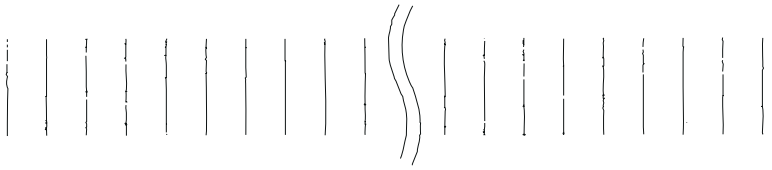

10. Press **Quit** to exit the menu.


Removal Procedures

Use the following procedures to remove and replace individual FRUs.


Top Cover Removal

CAUTION: Be sure to unplug the power cord whenever you are working on the printer with any of the covers removed.


1. Turn the printer off.
2. Disconnect the power cord and parallel cable at the printer.
3. Remove the front cover [**1**].
4. Remove the acoustic and ribbon access covers [**2**].

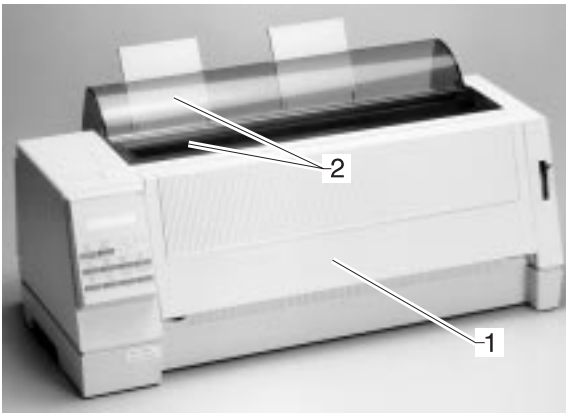

5. Set the paper select lever to the cut sheet position.
6. There are two screws [**3**] and six latches [**4**] securing the top cover to the bottom cover. Remove the two top cover [**3**] mounting screws.

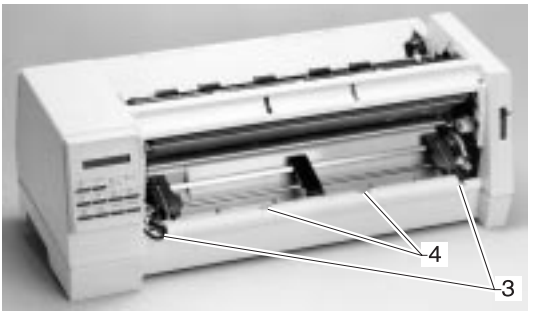

7. Place the printer on its left side. Insert a flat blade screwdriver into the two slots [**4**] and release the cover by prying down on the left side latches and up on the top cover.

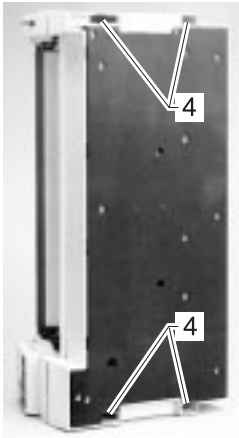

8. Place the printer on its right side and release the two right side latches.
9. Place the printer on its feet and release the remaining two top cover latches.
10. While lifting the top cover slightly, disconnect the operator panel cable from the main logic board and then remove the top cover.

Reinstallation:


Be sure that the operator panel cable is correctly aligned and inserted securely.

WARNING: Damage to the operator panel cable may cause failure of other electrical components of the printer. Be sure not to crimp or pinch this cable while reinstalling the top cover.

CAUTION: Be sure to unplug the power cord whenever you are working on the printer with one of the covers removed.


Auto Gap Motor

1. Remove the top cover.
   See “Top Cover Removal” on page 4-6.
2. Disconnect gap adjust motor connector CN20 from the main logic board.
3. Remove the sub logic card.
4. Remove the paper feed motor.
5. Remove the two gap adjust motor screws [**1**] through the access holes in the carrier motor mounting bracket and remove the motor [**2**].

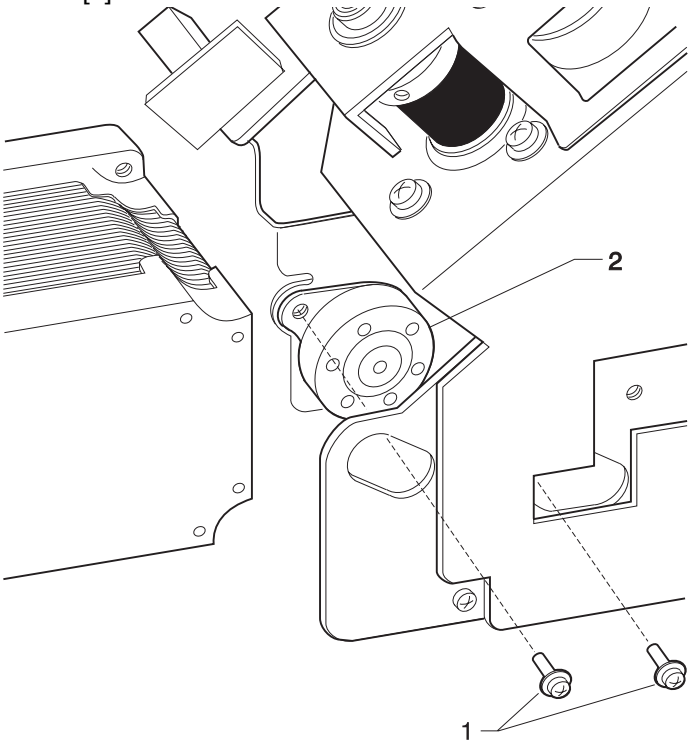


Auto Sheet Feeder Gears Removal

1. Remove the right cover [**1**].
2. Release the latch and then remove the joint gear [**2**].
3. Remove the idler gear [**3**].
4. Release the latch and then remove the pick-up gear [**4**].
5. Release the latch and then remove the combination lock mechanism [**5**].

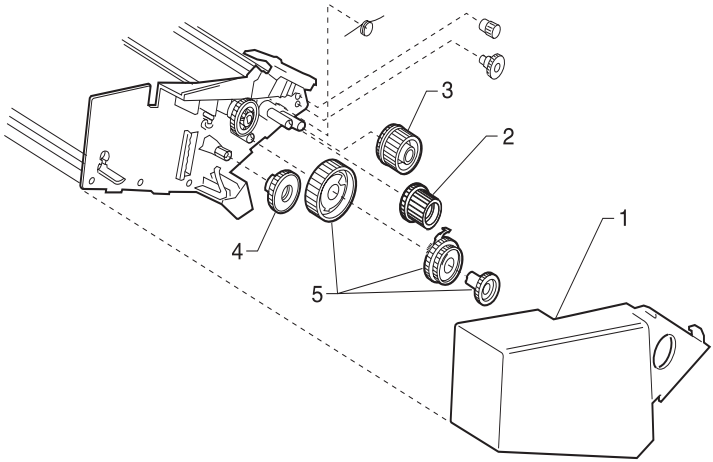


Auto Sheet Feeder Pick-up Roller Removal

1. Remove the covers and the cut sheet support.
2. Remove the idler gear and pick-up gear.
   See “Auto Sheet Feeder Gears Removal” on page 4-9.
3. Remove the left roller bushing [**1**].
4. Remove the right roller bushing [**2**].
5. Move the pick-up roller [**3**] to both ends of the shaft, and then remove them.

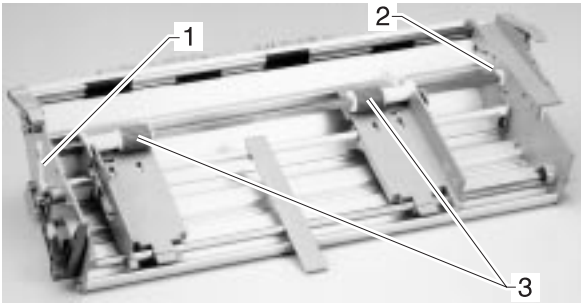

Belt Tension Pulley Plate Assembly Removal

1. Remove the top cover.
   See “Top Cover Removal” on page 4-6.
2. Turn the printer so you are facing the rear of the printer.
3. Remove both tension pulley plate mounting screws [**1**].
4. Manipulate the left side of the tension spring off the lug.
5. Slide the pulley plate to the right and off the carrier plate.
6. Slide the pin out of the pulley and manipulate the belt out of the tension pulley plate.

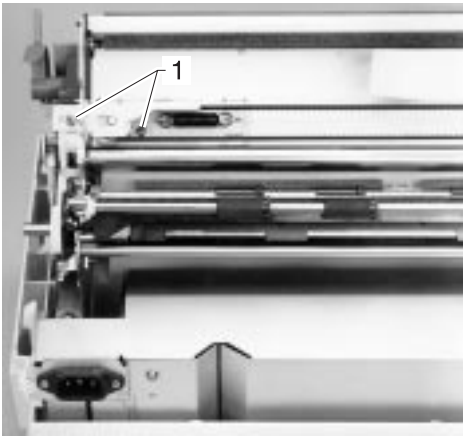


Base Assembly Removal

1. Remove the tractor assembly.


2. Remove the top cover.
   See “Top Cover Removal” on page 4-6.
3. Remove the print unit.
4. Remove the power supply.
5. Remove the main logic board.
6. Remove the tractor cable and bracket.
7. If replacing the bottom cover, write the machine serial number and part number on the blank label.

Carrier Removal

1. Remove the top cover.
   See “Top Cover Removal” on page 4-6.
2. Remove the printhead.
   See “Printhead Removal” on page 4-33.
3. Remove the carrier roller spring.
4. Remove the sub logic board.
   See “Sub Logic Board Removal” on page 4-38.
5. Remove the ribbon drive motor assembly [**1**].

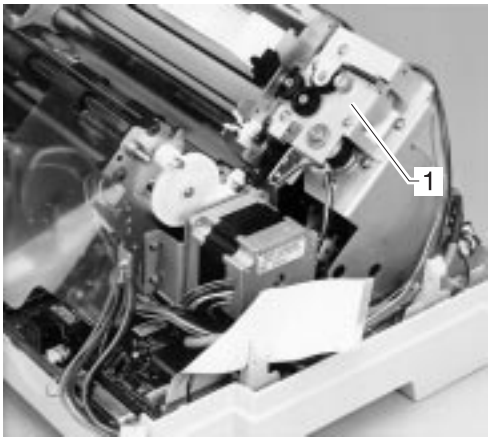


6. Loosen the two tension pulley plate screws [**2**]. Pull upward on both sides of the belt to move the tension pulley plate as far as possible toward the center of the printer, then retighten the large screw.

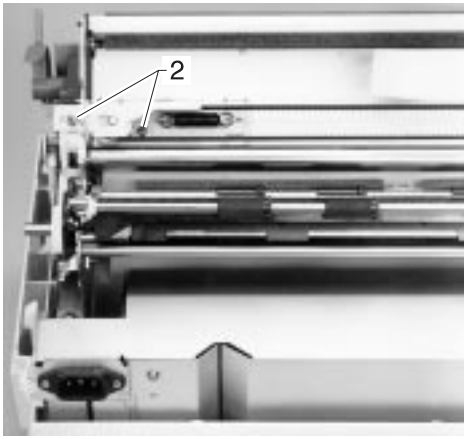

7. Remove the belt from the carrier motor pulley.
8. Push the tension pulley toward the outside of the printer and remove its shaft through the large part of the keyhole. Push the pulley upward and remove it to free the carrier belt.

9. Remove the gear / flag [**3**] from the end of the carrier shaft.

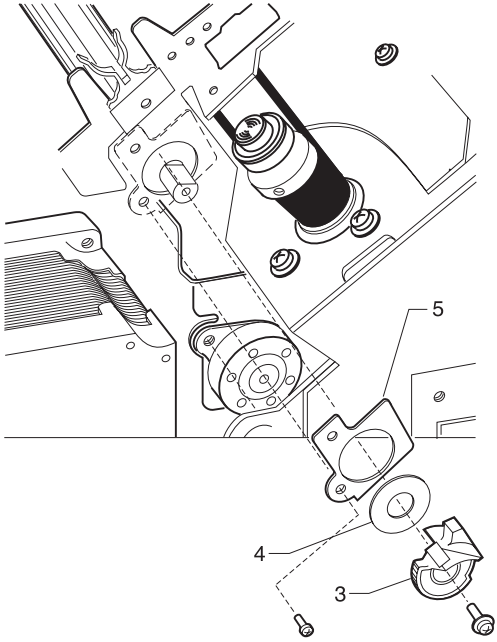


10. Remove the bearing [**4**] and its retainer [**5**] by pulling the bearing free and lifting the end of the carrier shaft.
11. Slide the carrier shaft toward the carrier motor to free the other end.

Reinstallation:

1. The bearing and retainer must be on the shaft when the shaft is lowered into place. Make sure the bearing flange goes behind the black double gear.
2. Rotate the shaft to get the bearing to seat in the side frame.
3. After reinstalling, check the “Printhead-to-Platen Gap Adjustment” on page 4-2.

Carrier Motor Assembly Removal

1. Remove the top cover.
   See “Top Cover Removal” on page 4-6.
2. Disconnect carrier motor connectors CN9 and CN15 from the main logic board.
3. Loosen the two tension pulley plate screws. Pull upward on both sides of the belt to move the tension pulley plate as far as possible toward the center of the printer, then retighten the large screw.
4. Remove the three screws [**1**] holding the motor to its bracket.
5. Remove the carrier motor.

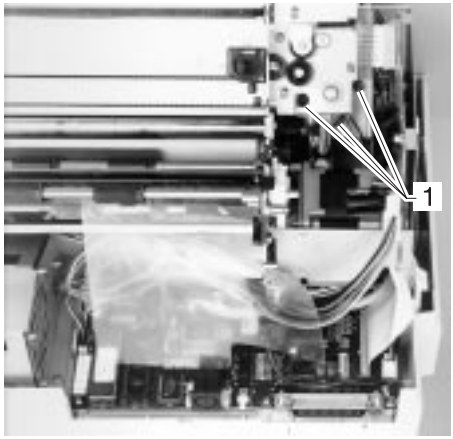

Reinstallation:

1. Be sure the motor pulley goes inside the belt as the motor is being reinstalled.
2. The shaft bearing should be under the ribbon motor plate, mounted to the carrier motor shaft.
3. Ribbon motor screws should be loosened when reinstalling the carrier motor.
4. Tighten the carrier motor screws before you tighten the ribbon motor assembly mounting screws.

Carrier Plate Removal

1. Remove the top cover.
   See “Top Cover Removal” on page 4-6.
2. Remove the print unit.
3. Remove the carrier.
4. Remove the lower pinch roller.
5. Remove the carrier motor.
6. Remove the auto gap motor and its bracket.
7. Remove the carrier motor bracket.
8. Remove the right side frame.
9. Remove the two screws holding the carrier plate to the left side frame, and remove the carrier plate.


Label Jam Removal

When a pressure-sensitive label separates from its protective backing and jams and sticks to the paper separator below the carrier plate, the following procedure should be used to remove the label.


1. Remove the top cover.
   See “Upper Feed Roller Removal” on page 4-39.
2. Remove the tractor assembly.
3. Remove the print unit.
   See “Print Unit Removal” on page 4-30.
4. Remove the paper separator.
   See “Paper Separator Removal” on page 4-28.
5. Carefully remove the label from the paper separator. If the label is jammed below the carrier plate or on the lower portion of the paper guide/platen assembly, carefully remove the label without scratching either surface.

Lower Feed Roller Removal


1. Remove the top cover.
   See “Top Cover Removal” on page 4-6.
2. Remove the print unit.
3. Remove the sub logic board.
4. Remove the paper feed motor.
5. Remove the large gear from the left side frame by prying it from behind with a flat-blade screwdriver.
6. Remove the support bracket [**1**] from the back of the platen.
7. Remove the paper select lever.

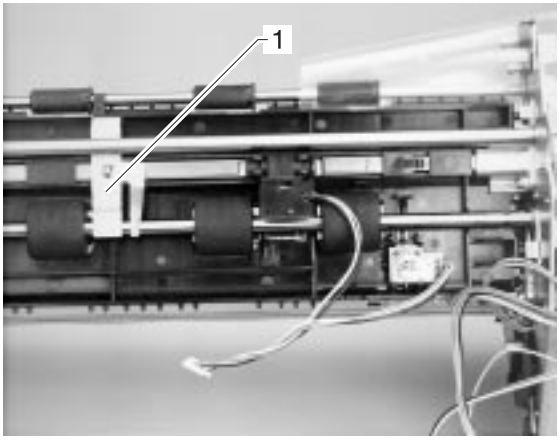

8. Remove the gear shaft support plate [**2**] and the two gears with their springs [**3**].
9. Remove the large screw [**4**] holding the tension pulley plate to the side frame.
10. Remove the gear, clip and bearing [**5**] from the end of the lower feed roller shaft.

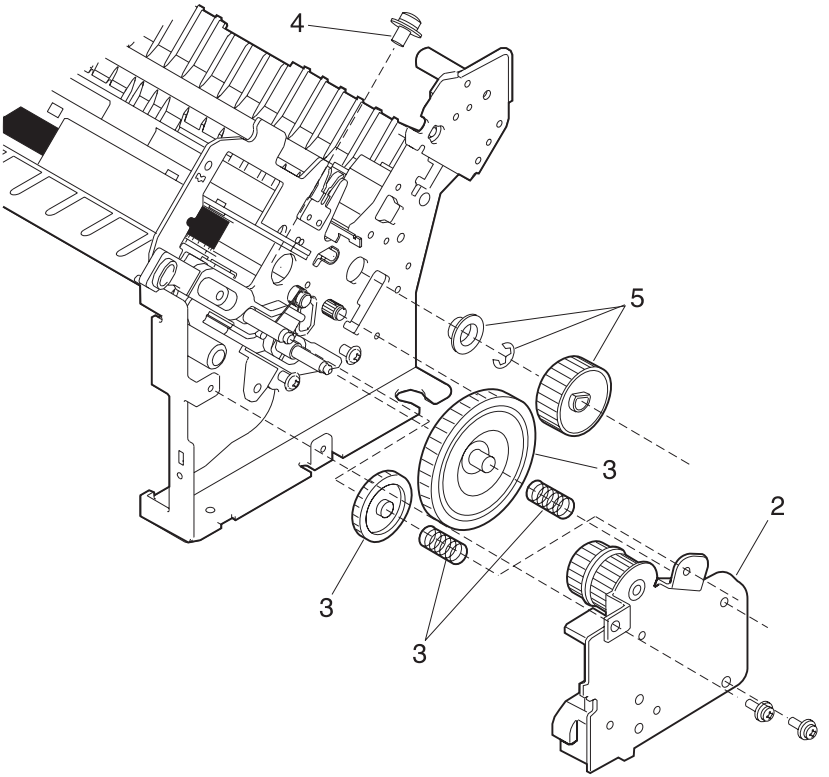


11. Release and remove the separator plate spring [**6**].
12. Release the spring [**7**] from the right end of the lower pinch roller.

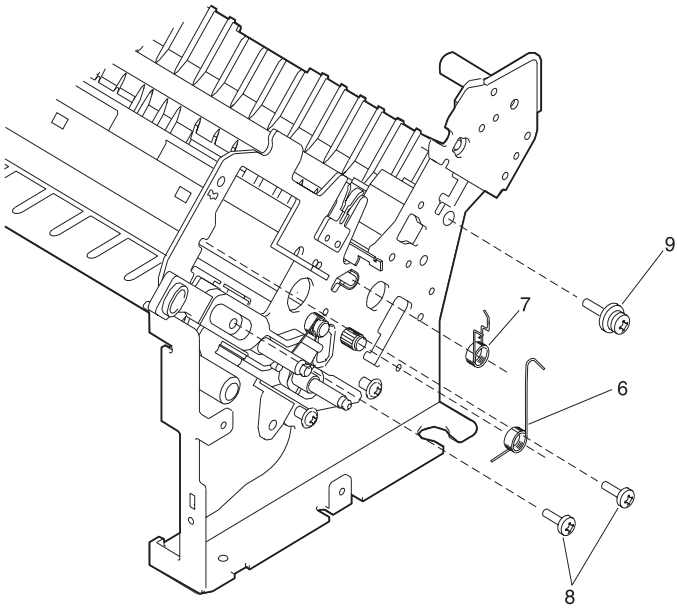

13. Remove the two carrier plate screws [**8**]. One is in the slot in the slider cam.
14. Remove the support shaft screw [**9**].

15. Remove the two platen screws [**10**].

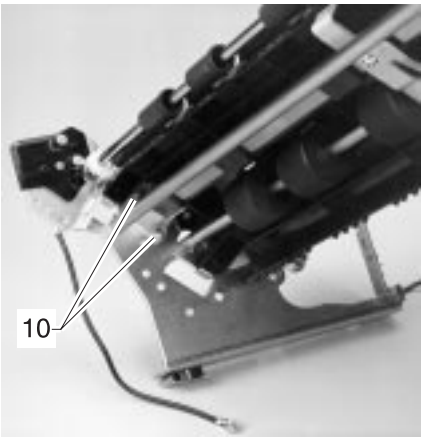

16. Remove the right side frame.
17. Remove the lower feed roller shaft.


Note: The upper feed roller bearing should stay in the side frame. The lower pinch roller bushing is free on the end of the shaft.

Reassembly:

1. Remove the paper separator while first installing the side frame loosely. Make sure the lower pinch roller spring is above the bushing.
2. Remove the screw from the right end of the paper separator.
3. Install the left end of the paper separator first, then flex the right side frame slightly to get the right end installed.
4. Reinstall the screw through the hole above the slider cam.

Lower Pinch Roller Removal

1. Remove the ribbon cover and the ribbon.
2. Remove the U-shaped ground spring [**1**].
3. Release the left and right pinch roller springs [**2**].

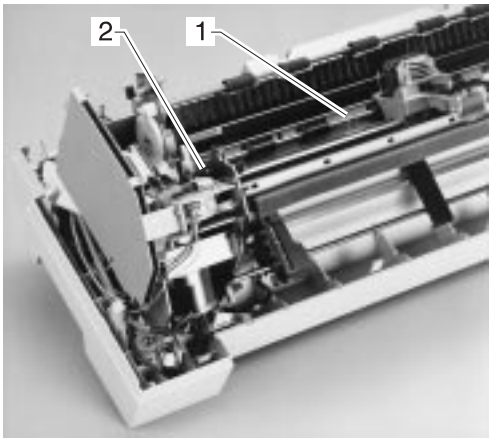

4. Move the carrier to the right as far as it will go.
5. Lift the left end of the lower pinch roller and move it to the left until the right end clears the carrier. Be sure not to lose the right bearing.
6. Remove the shaft to the right.

Main Logic Board Removal

1. Remove the top cover.
   See “Top Cover Removal” on page 4-6.
2. Disconnect all cables connected to the main logic board.
3. Remove the three screws at the rear edge of the board and remove the board.
4. Remove the EPROM from the old board and install it on the new one.

Reinstallation:

After replacing the main logic board, recheck the “Bidirectional Print Adjustment” on page 4-4 and the “Printhead-to-Platen Gap Adjustment” on page 4-2.

Memory Module Removal

The Memory Module is an option.

1. Turn the printer **Off** and disconnect the power cord at the printer.
2. Remove the rear cover.
3. Remove the paper support.
4. Insert a small flat screwdriver under each end of the module and lift up gently. Do not insert the screwdriver too deep, or the main logic board may be damaged.


Note: Be careful not to bend the pins when you re-install the module.

Operator Panel Assembly Removal


1. Remove the top cover.
   See “Top Cover Removal” on page 4-6.
2. Disconnect the ribbon cover sensor connector from the back of the operator panel.
3. Disconnect the operator panel cable from the back of the operator panel.
4. Push up on the lower latches to free the operator panel from the top cover.

Paper Empty Sensor /TOF Sensor Removal

1. Remove the top cover.
   See “Top Cover Removal” on page 4-6.
2. Remove the print unit. See “Print Unit Removal” on page 4-30.
3. Remove the right screw [**1**] in the support shaft.

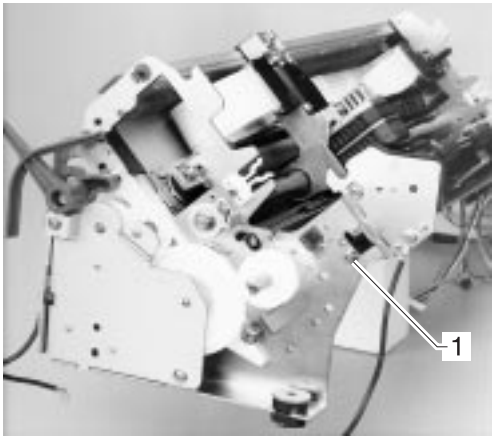

4. Paper Empty Sensor:
   a. Release the four latches [**2**] and remove the paper empty sensor.
   b. Carefully grasp the paper empty flag with a pair of needle nose pliers and remove the flag by pulling it perpendicularly away from the paper guide. Do not damage or lose the paper empty sensor spring.

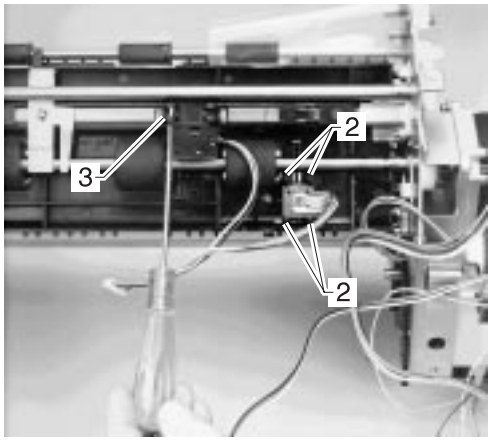


5. Unsnap the TOF sensor from the back of the paper guide using a screwdriver as illustrated [**3**].

To Replace the TOF Sensor Flag

Unless necessary, do not replace the sensor flag when replacing the sensor.

1. With diagonal pliers, cut the post and two tabs [**5]** off as flush as possible.
2. Unsnap both ends of the sensor flag from the paper guide. Carefully remove the sensor flag spring [**4**] from the bottom end of the sensor flag.
3. Pivot the upper tip of the sensor flag downward through the open area just to the right of the center feed roll and lift the lower end of the flag until it becomes free.
4. The sensor flag spring hooks over the lower arm of the flag. Be sure the point of the sensor flag is kept in the paper path by the spring force. Be sure the leaf spring is in contact with the lower feed roller shaft.

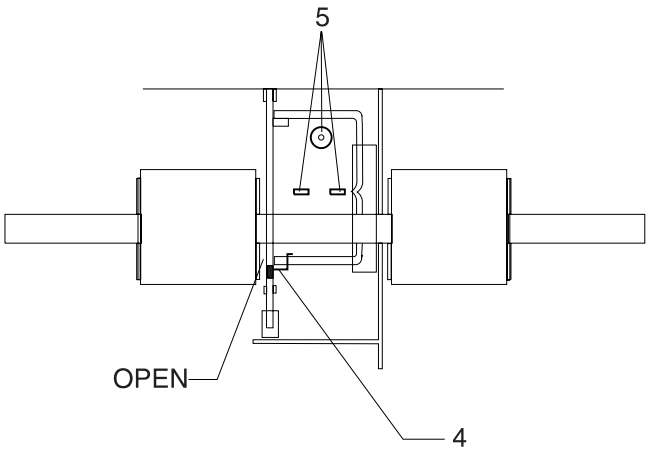

Paper Feed Motor Removal

1. Remove the top cover.
   See “Top Cover Removal” on page 4-6.
2. Disconnect the paper feed motor connector CN10 from the main logic board.
3. Remove the sub logic board.
4. Remove the four screws holding the motor in place and remove the motor.
5. Remove the double gear from the shaft on the face of the motor.

Reinstallation:

Hold the bottom screw in place in the motor bracket with the screwdriver. This screw is difficult to reach once the motor is in place.

Paper Guide Removal

1. Remove the front cover and place it front down on a flat surface.
2. Pry under the front part of the guide to release the two latches, and remove the paper guide.

Paper Guide / Platen Assembly Removal


1. Remove the top cover.
   See “Top Cover Removal” on page 4-6. Remove the print unit.
2. Remove the sub logic card.
3. Remove the large gear on the left side frame by prying it from behind with a flat-blade screwdriver.
4. Remove the support shaft screw and the two platen screws from the left side frame.
5. Remove the right side frame.
6. Remove the paper guide/platen assembly.

Paper Select Lever Removal

1. Remove the top cover.
   See “Top Cover Removal” on page 4-6.
2. Release the latch and then remove the paper select lever from the right side frame.


Paper Select Sensor Removal

1. Remove the top cover.
   See “Top Cover Removal” on page 4-6.
2. Remove the print unit.
   See “Print Unit Removal” on page 4-30.
3. Use a #1 Phillips screwdriver to remove the two screws [**1**] holding the paper select sensor to the left side frame.

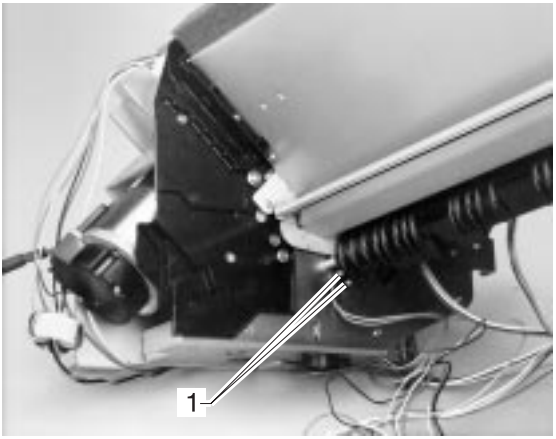


Paper Separator Removal


1. Remove the top cover.
   See “Top Cover Removal” on page 4-6.
2. Remove the print unit from the base.
   See “Print Unit Removal” on page 4-30.
3. Remove the paper select lever.
4. Remove the gear shaft support plate and the two gears with their springs [**1**].
5. Remove the large screw [**2**] holding the tension pulley plate to the side frame.

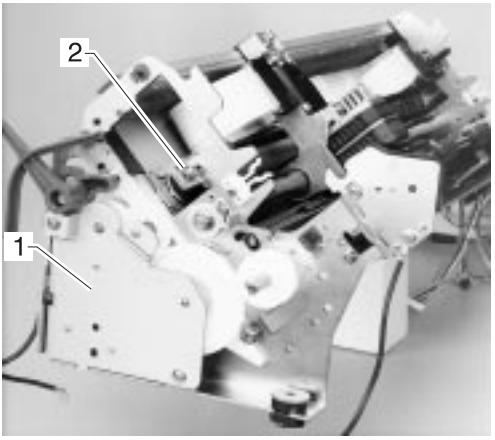

6. Release and remove the separator plate spring [**3**] from the right side frame.
7. Remove the paper separator screw [**4**] from above the slider cam.
8. Remove the two carrier plate screws [**5**] from the right side frame. One is behind the slider cam.
9. Loosen several turns but do not remove the support shaft screw [**6**] and the two platen screws.

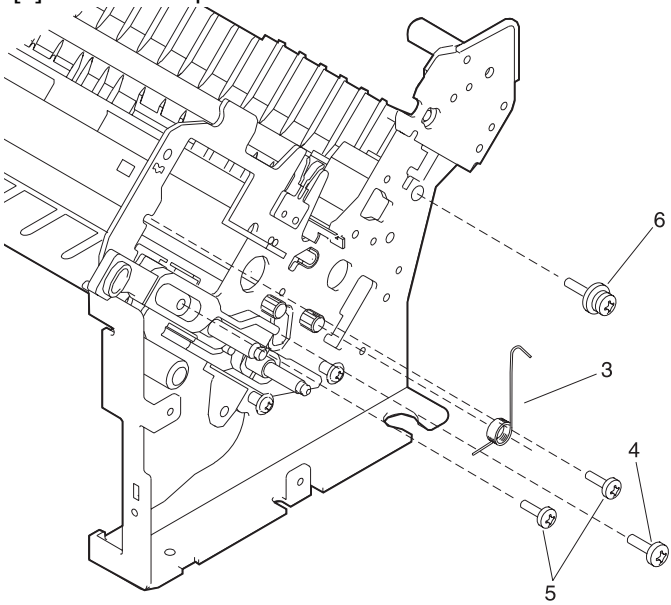

10. Wiggle the right side frame and pull it about 2 mm to the right.
11. Flex the front of the side frame outward slightly to free the right end of the paper separator [**7**].

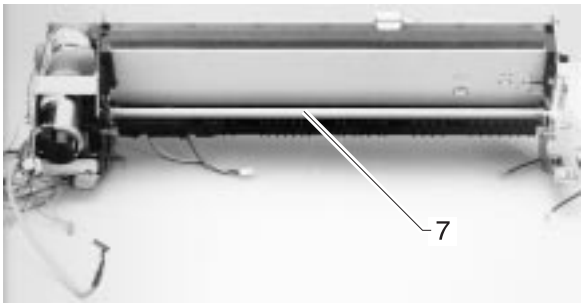

12. Remove the paper separator.

Power Supply Removal

CAUTION: The power supply may be hot.

1. Turn off the printer and disconnect the power cord at both ends.
2. Remove the top cover.
   See “Top Cover Removal” on page 4-6.
3. Disconnect the power connectors from the sub logic board and main logic board.
4. Remove the five mounting screws and the ground wire screw.
5. Lift the rear edge of the supply and remove it from the printer.


Power Supply Fan Removal

1. Remove the power supply.
2. Remove the four screws holding the power supply board to the cover.
3. Pivot the board out of the cover far enough to disconnect the fan connector.
4. Remove the three screws holding the fan to the cover.


Print Unit Removal

1. Remove the top cover.
   See “Top Cover Removal” on page 4-6.
2. Disconnect the tractor connector.
3. Disconnect the flexible signal cable and the power cable from the sub logic card.
4. Remove the ground leads from the four corners of the print unit.
5. Disconnect the following connectors from the main logic board: CN4, CN7, CN8, CN9, CN10, CN15, CN18, CN19, and CN20.
6. (4227-200) Disconnect CN17. Remove the upper screw from the serial port card mounting bracket.


7. Remove the three screws [**1**] from the left side holding the print unit to the base.

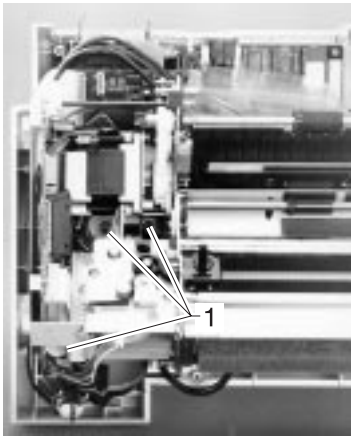

8. Remove the screw [**2**] from the right side holding the print unit to the base

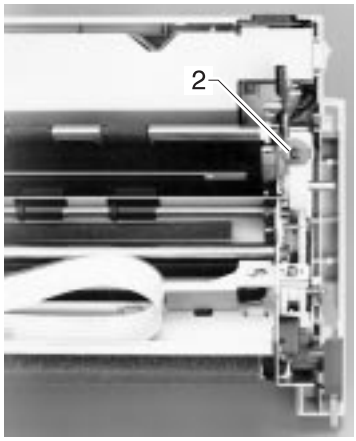

9. Slide the printer partway off the edge of the table. From the bottom, remove the screw [**3**] holding the front of each side frame to the base.

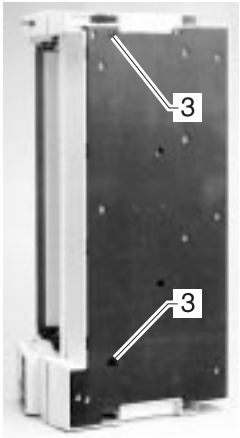

10. Lift the print unit from the base.

Reinstallation:


For ease of reassembly, remove the flexible signal cable from the main logic board and connect it to the sub logic board before reinstalling the print unit.

Printhead Removal

1. Turn the printer off.
2. Disconnect the power cord at the printer.

Caution: Allow the printhead to cool for 15 minutes.

3. Remove the ribbon cover and ribbon.
4. Remove the two screws [**1**] on the cable retainer and disconnect the two cables. These are ZIF connectors.
5. Remove the two screws [**2**] holding the printhead to the carrier and lift the printhead out.

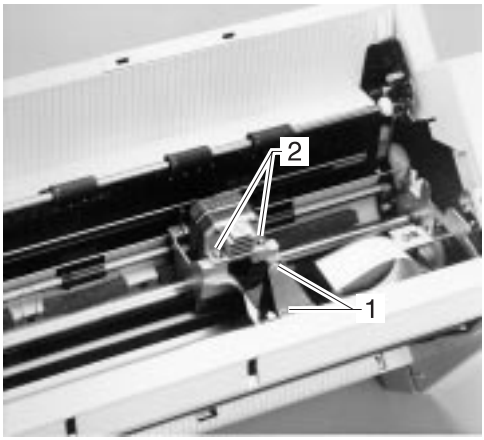

Reinstallation:

1. Fold the printhead cables under the printhead to prevent the tension pulley plate from interfering with the cables.
2. Hold the printhead down while pressing it toward the platen and tighten the two printhead mounting screws.
3. Check the “Printhead-to-Platen Gap Adjustment” on page 4-2.

Printhead Cables Removal


1. Remove the top cover.
   See “Top Cover Removal” on page 4-6.
2. Remove the two screws on the cable retainer and disconnect the two cables. These are ZIF connectors.
3. Disconnect the other end of the cables from the sub logic board and pull the cables from under the ribbon motor.
4. The cables are attached to the carrier plate with double-faced tape.

Reinstallation:

Be sure the tension pulley plate does not interfere with the printhead cables.

Ribbon Drive Motor Assembly Removal


1. Remove the top cover.
   See “Top Cover Removal” on page 4-6.
2. Remove the sub logic board.
3. Remove the ribbon drive post cover and the ribbon drive post [**1**].
4. Remove the auto gap sensor [**2**] from the motor bracket.
5. Disconnect ribbon motor connector CN19 from the main logic board.
6. Remove the carrier motor bearing retainer and bearing [**3**] from the ribbon motor bracket.
7. Remove the three screws [**4**] holding the ribbon drive motor bracket and remove the ribbon drive motor assembly.

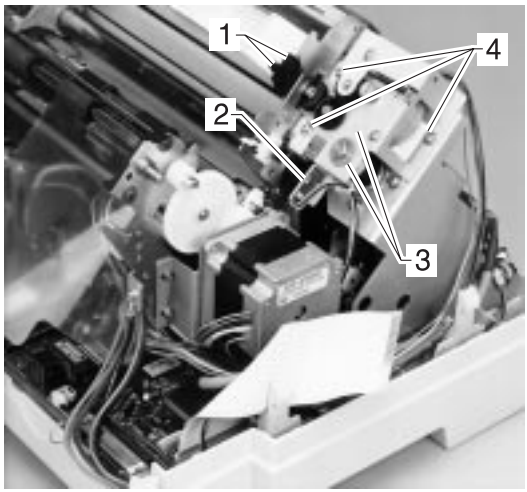


Right Side Frame Removal

1. Remove the top cover.
   See “Top Cover Removal” on page 4-6.
2. Remove the print unit.
3. Remove the paper select lever.
4. Remove the gear shaft support plate [**2**] and the two gears with their springs [**3**].
5. Remove the large screw [**4**] holding the tension pulley plate to the side frame.
6. Remove the gear, clip and bearing [**5**] from the end of the lower feed roller shaft.

7. Release and remove the separator plate spring [**6**].
8. Release the spring [**7**] from the right end of the lower pinch roller.

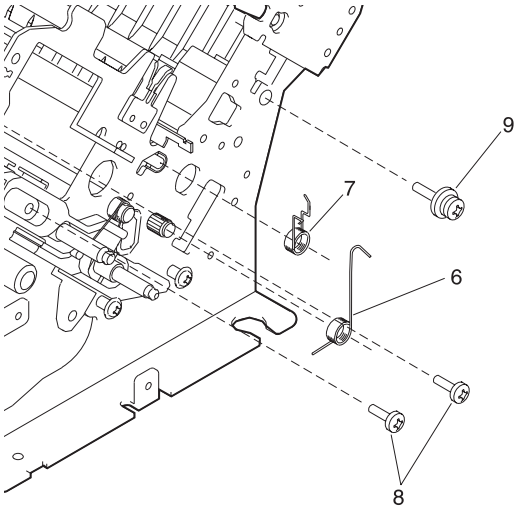

9. Remove the two carrier plate screws [**8**]. One is in the slot in the slider cam.
10. Remove the support shaft screw [**9**] and the two platen screws [**10**].

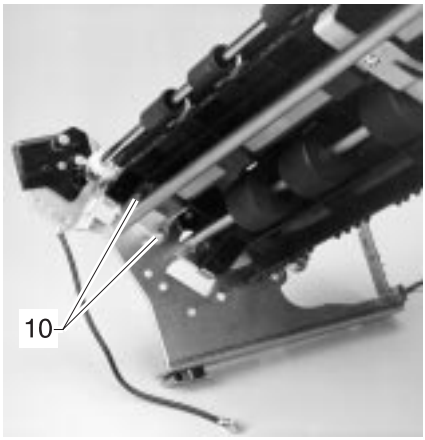

11. Remove the right side frame.

Note: The upper feed roller bearing should stay in the side frame. The lower pinch roller bushing is free on the end of the shaft.

Reassembly:

1. Remove the paper separator while first installing the side frame loosely. Be sure the lower pinch roller spring is above the bushing.
2. Remove the screw from the right end of the paper separator.
3. Install the left end of the paper separator first, then bend the right side frame slightly to get the right end installed.
4. Reinstall the separator screw through the hole above the slider cam.
5. Set the printhead to platen gap.

Sub Logic Board Removal


1. Remove the top cover.
   See “Top Cover Removal” on page 4-6.
2. Disconnect the power connector and the signal connector from the sub logic board.
3. Remove the three screws.
4. Disconnect the printhead cables and remove the sub logic board.

Reinstallation:

For ease of reassembly, remove the flexible signal cable from the main logic board and connect it to the sub logic board before reinstalling the sub logic board. Remember to reconnect the ground lead to the bottom mounting screw.

Upper Feed Roller Removal


1. Remove the top cover.
   See “Top Cover Removal” on page 4-6.
2. Release the latches and remove the gear [**1**] from the left end of the shaft.

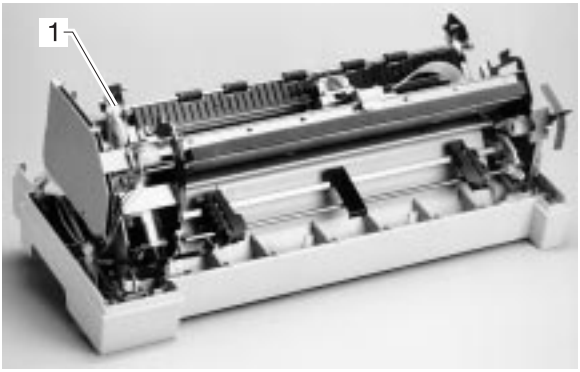


3. Remove the clip from the left end.
4. Slide the shaft to the left, making sure the right bearing comes out of the side frame with the shaft.
5. Lift the shaft out to the right. Be sure not to lose the bearings; they are both free to come off the shaft.

5. Connector Locations

4227-100

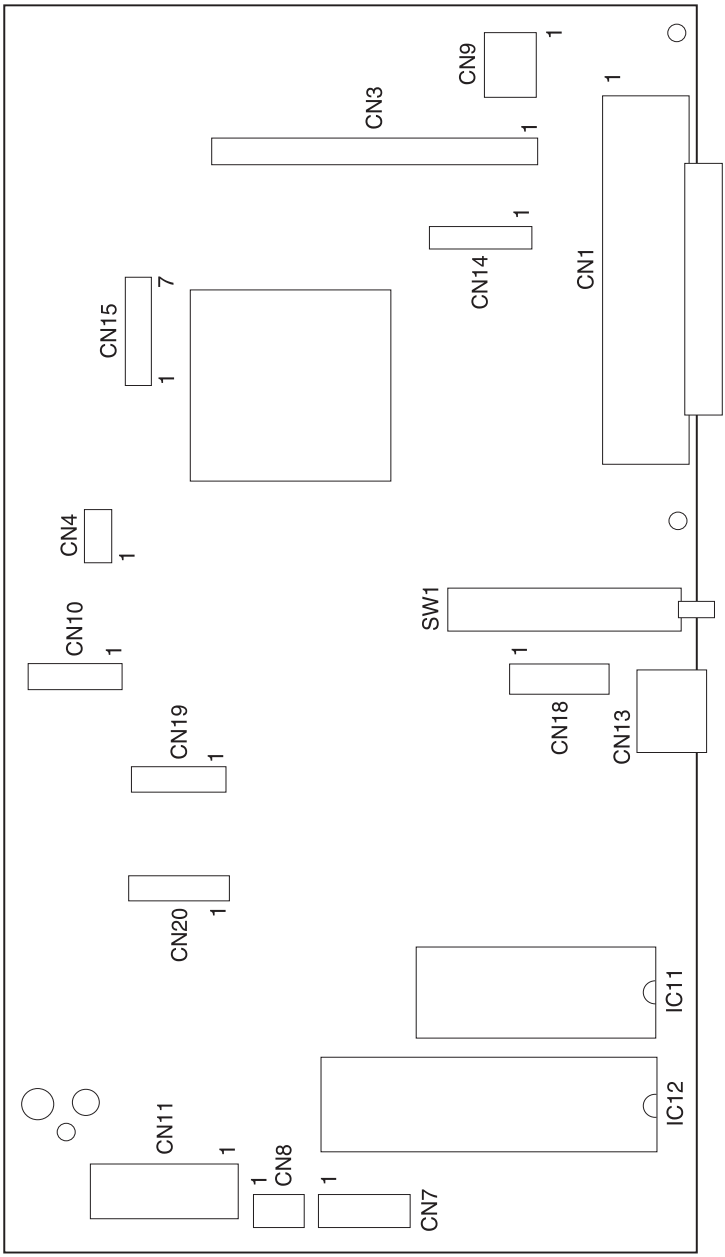


4227-200

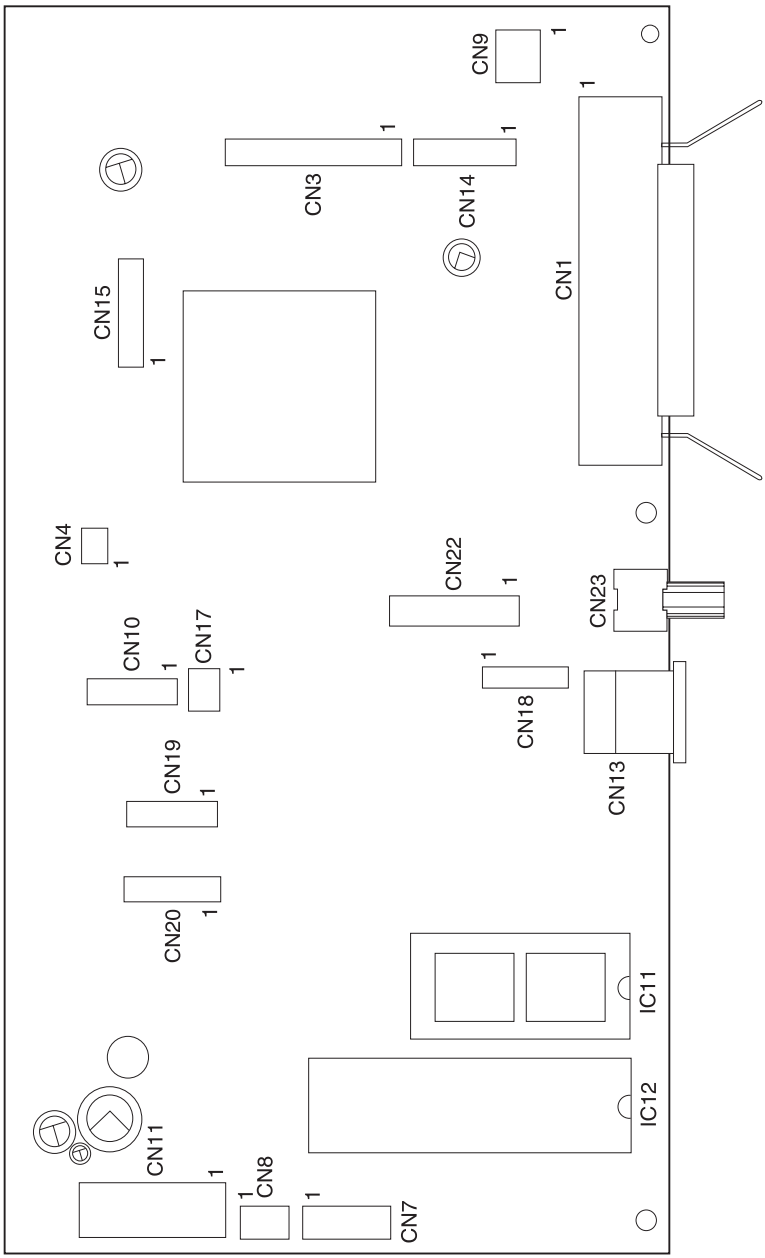
CN9
1
1
CN3
1
CN14
1
CN1
CN15
1
CN4
1
CN22
1
CN23
CN10
1
CN17
1
1
CN18
CN19
1
CN13
CN20
1
IC11
IC12
CN11
1
CN8
1
1
CN7

Main Logic Board Connectors

CN1	Parallel / Serial Port
CN3	Sub Logic Board Flex Cable
CN4	Paper Select Sensor
CN7	Paper Empty and TOF Sensors
CN8	Gap Home Sensor
CN9	Carrier Motor Cable #1
CN10	Paper Feed Motor
CN11	Power Supply
CN13	Tractor 2 DIN
CN14	Operator Panel
CN15	Carrier Motor Cable #2
CN17	Carrier Motor Cooling Fan (4227-200)
CN18	Tractor PSet & Jam Sensors
CN19	Ribbon Motor
CN20	Auto Gap Motor
CN22	Serial Port (4227-200)
CN23	Serial Interface 5 V dc Power (4227-200)


4227-100

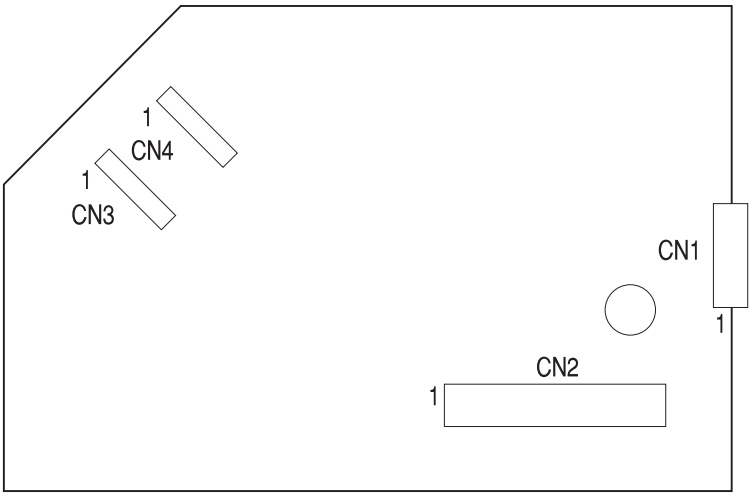

Sub Logic Board Connectors

CN1	Power Supply
CN2	Main Logic Board Flex Cable
CN3	Printhead
CN4	Printhead

4227-200

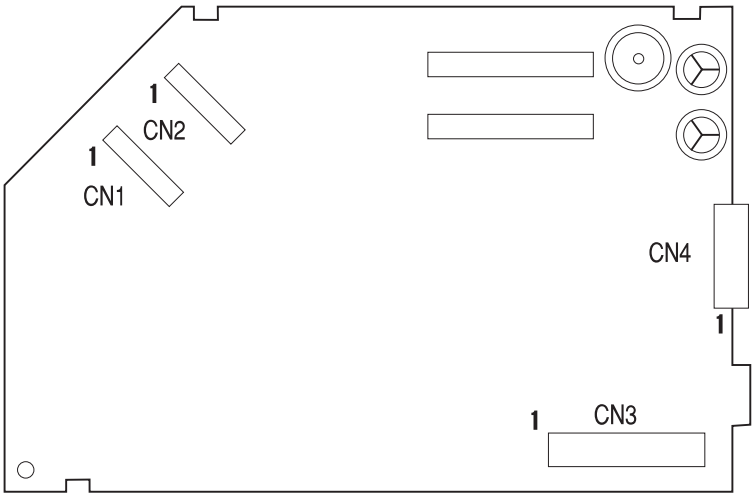

CN1	Printhead
CN2	Printhead
CN3	Main Logic Board Flex Cable
CN4	Power Supply

Operator Panel Connectors


CN1	Ribbon Cover Sensor
CN2	LCD Board (soldered)
CN3	Main Logic Board


Component Locations

This chapter shows the location of specific parts of the printer.


Part Name	Ref.	Part Name	Ref.
Auto Gap Motor	W	Parallel/Serial Interface Connector	Y
Auto Gap Sensor	V	Platen	B
Carrier	P	Power Supply	BB
Carrier Motor	K	Printhead	Q
Carrier Plate	I	Printhead Cables	C
Jam Sensor	R	PSet Sensor	S
Left Side Frame	L	Ribbon Drive Motor	U
Lower Feed Roller	M	Ribbon Drive Post	T
Lower Pinch Roller	N	Right Side Frame	D
Main Logic Board	AA	RS232/RS422 Switch	Z
Paper Empty Sensor	DD	Sub Logic Board	A
Paper Feed Motor	X	Tension Pulley Plate	E
Paper Select Lever	F	TOF Sensor	CC
Paper Select Sensor	J	Tractor Unit	G
Paper Separator	H	Upper Feed Roller	O


Component Location Illustrations

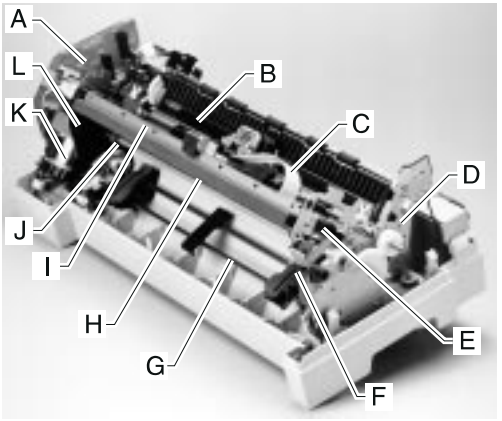

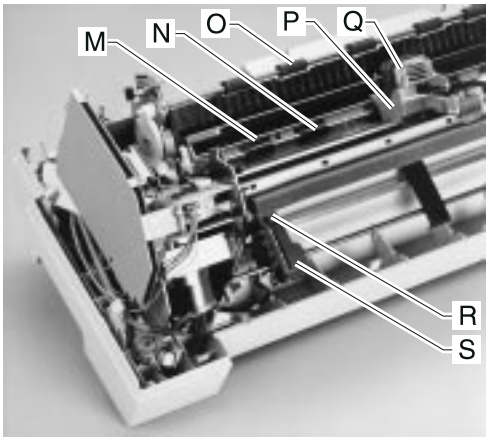

Component Location Illustrations (Continued)

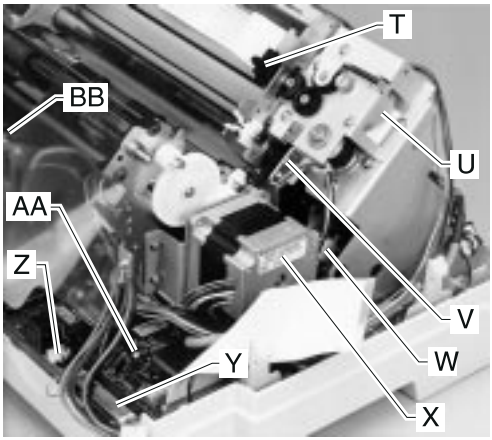

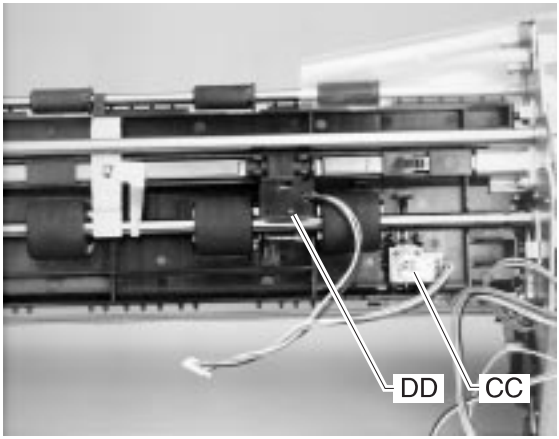

Signal Connections

Power Supply ->Main Logic Board<-->Sub Logic Board

Power Supply	Main Logic Board CN11		Sub Logic Board CN1 - 4227-100 CN4 - 4227-200	
+40 V dc	Pin 1	+40 V dc	Pin 1	+40 V dc
+40 V dc	Pin 2	+40 V dc	Pin 2	+40 V dc
Power Gnd	Pin 3	Power Gnd	Pin 3	Power Gnd
Power Gnd	Pin 4	Power Gnd	Pin 4	Power Gnd
+5 V dc	Pin 5	+5 V dc	Pin 5	+5 V dc
Signal Gnd	Pin 6	Signal Gnd	Pin 6	Signal Gnd

Main Logic Board<-->Parallel Interface Cable (4227-100)

Main Logic Board CN1			
Pin 1	Strobe	Pin 19	Signal Gnd
Pin 2	Data 1	Pin 20	Signal Gnd
Pin 3	Data 2	Pin 21	Signal Gnd
Pin 4	Data 3	Pin 22	Signal Gnd
Pin 5	Data 4	Pin 23	Signal Gnd
Pin 6	Data 5	Pin 24	Signal Gnd
Pin 7	Data 6	Pin 25	Signal Gnd
Pin 8	Data 7	Pin 26	Signal Gnd
Pin 9	Data 8	Pin 27	Signal Gnd
Pin 10	- Acknlg	Pin 28	Signal Gnd
Pin 11	Busy	Pin 29	Signal Gnd
Pin 12	TXD/PE	Pin 30	Signal Gnd
Pin 13	Select	Pin 31	-RXD/-INIT
Pin 14	RXD/-AF	Pin 32	-TXD/-Error
Pin 15	TXD	Pin 33	RXD
Pin 16	Signal Gnd	Pin 34	DTR
Pin 17	Chassis Gnd	Pin 35	DSR
Pin 18	RTS	Pin 36	-CTS/-SE

Main Logic Board<-->Parallel Interface Cable (4227-200)

Main Logic Board CN1			
Pin 1	Strobe	Pin 19	Signal Gnd
Pin 2	Data1	Pin 20	Signal Gnd
Pin 3	Data2	Pin 21	Signal Gnd
Pin 4	Data3	Pin 22	Signal Gnd
Pin 5	Data4	Pin 23	Signal Gnd
Pin 6	Data5	Pin 24	Signal Gnd
Pin 7	Data6	Pin 25	Signal Gnd
Pin 8	Data7	Pin 26	Signal Gnd
Pin 9	Data8	Pin 27	Signal Gnd
Pin 10	-Acknlg	Pin 28	Signal Gnd
Pin 11	Busy	Pin 29	Signal Gnd
Pin 12	PE	Pin 30	Signal Gnd
Pin 13	Select	Pin 31	-INIT
Pin 14	-AF	Pin 32	-Error
Pin 15	NC	Pin 33	Signal Gnd
Pin 16	Signal Gnd	Pin 34	NC
Pin 17	Chassis Gnd	Pin 35	+5 V dc
Pin 18	+5 V dc	Pin 36	-SE

Main Logic Board<-->Sub Logic Board (4227-100)

Main Logic Board CN3		Sub Logic Board CN2	
Pin 1	HDTHERMO	Pin 38	HDTHERMO
Pin 2	R7COM	Pin 37	R7COM
Pin 3	L4COM	Pin 36	L4COM
Pin 4	L1COM	Pin 35	L1COM
Pin 5	L8COM	Pin 34	L8COM
Pin 6	L5COM	Pin 33	L5COM
Pin 7	R1COM	Pin 32	R1COM
Pin 8	R4COM	Pin 31	R4COM
Pin 9	R3COM	Pin 30	R3COM
Pin 10	R8COM	Pin 29	R8COM
Pin 11	R6COM	Pin 28	R6COM
Pin 12	R9COM	Pin 27	R9COM
Pin 13	R2COM	Pin 26	R2COM
Pin 14	R5COM	Pin 25	R5COM
Pin 15	L9COM	Pin 24	L9COM
Pin 16	L6COM	Pin 23	L6COM
Pin 17	L7COM	Pin 22	L7COM
Pin 18	L2COM	Pin 21	L2COM
Pin 19	L3COM	Pin 20	L3COM
Pin 20	R9	Pin 19	R9
Pin 21	R3	Pin 18	R3
Pin 22	R5	Pin 17	R5
Pin 23	R1	Pin 16	R1
Pin 24	L6	Pin 15	L6
Pin 25	L8	Pin 14	L8
Pin 26	L2	Pin 13	L2
Pin 27	L4	Pin 12	L4
Pin 28	L1	Pin 11	L1
Pin 29	L3	Pin 10	L3
Pin 30	L5	Pin 9	L5
Pin 31	L7	Pin 8	L7
Pin 32	R8	Pin 7	R8
Pin 33	L9	Pin 6	L9
Pin 34	R4	Pin 5	R4
Pin 35	R6	Pin 4	R6
Pin 36	R7	Pin 3	R7
Pin 37	R2	Pin 2	R2
Pin 38	NC	Pin 1	NC

Main Logic Board<-->Sub Logic Board (4227-200)

Main Logic Board CN3	Sub Logic Board CN3
Pin 1 HCSEL	Pin 22 HCSEL
Pin 2 Signal Gnd	Pin 21 Signal Gnd
Pin 3 HDTHERMO	Pin 20 HDTHERMO
Pin 4 R1COM	Pin 19 R1COM
Pin 5 L1COM	Pin 18 L1COM
Pin 6 R2COM	Pin 17 R2COM
Pin 7 L2COM	Pin 16 L2COM
Pin 8 L3COM	Pin 15 L3COM
Pin 9 R3COM	Pin 14 R3COM
Pin 10 L4COM	Pin 13 L4COM
Pin 11 R4COM	Pin 12 R4COM
Pin 12 L5COM	Pin 11 L5COM
Pin 13 R5COM	Pin 10 R5COM
Pin 14 L6COM	Pin 9 L6COM
Pin 15 R6COM	Pin 8 R6COM
Pin 16 L7COM	Pin 7 L7COM
Pin 17 R7COM	Pin 6 R7COM
Pin 18 L8COM	Pin 5 L8COM
Pin 19 L8COM	Pin 4 R8COM
Pin 20 L9COM	Pin 3 L9COM
Pin 21 R9COM	Pin 2 R9COM
Pin 22 BUZZER	Pin 1 BUZZER

Main Logic Board<-->Paper Select Sensor

CN4	
Pin 1	Not Used
Pin 2	Signal Gnd
Pin 3	FRETRA
Pin 4	Signal Gnd

Main Logic Board<-->Paper Empty & TOF Sensors

CN7	
Pin 1	PE1P
Pin 2	PE1
Pin 3	Signal Gnd
Pin 4	PE2P
Pin 5	PE2
Pin 6	Signal Gnd

Main Logic Board<-->Auto Gap Sensor

CN8	
Pin 1	+5 V dc
Pin 2	AGHPC
Pin 3	AGHP

Main Logic Board<-->Carrier Motor Cable #1

CN9	
Pin 1	CA+
Pin 2	CA-

Main Logic Board<-->Paper Feed Motor

CN10	
Pin 1	FDO
Pin 2	FDC
Pin 3	FDB
Pin 4	FDA
Pin 5	FDCOM
Pin 6	FDCOM

Main Logic Board<-->Tractor 2 DIN

CN13	
Pin 1	+26Vdc
Pin 2	+26Vdc
Pin 3	Power Gnd
Pin 4	PSET
Pin 5	+5Vdc
Pin 6	DTCOM
Pin 7	DSET
Pin 8	Signal Gnd
Pin 9	DTMTA
Pin 10	DTMTB
Pin 11	JAM
Pin 12	DHP
Pin 13	DPOS

Main Logic Board<-->Carrier Motor Cooling Fan (4227-200)

CN17	
Pin 1	Fan+
Pin 2	Fan-

Main Logic Board<-->5 V dc Power (4227-200)

CN23	
Pin 1	Signal Gnd
Pin 2	+5 V dc

Main Logic Board<-->Operator Panel

Main Logic Board CN14	Operator Panel Board CN3
Pin 1 +5Vdc	Pin 1 +5 V dc
Pin 2 SLATCH	Pin 2 SLATCH
Pin 3 +5Vdc	Pin 3 +5 V dc
Pin 4 TXD	Pin 4 TXD
Pin 5 Signal Gnd	Pin 5 Signal Gnd
Pin 6 RXD	Pin 6 RXD
Pin 7 Signal Gnd	Pin 7 Signal Gnd
Pin 8 SCLK	Pin 8 SCLK
Pin 9 Signal Gnd	Pin 9 Signal Gnd
Pin 10 LLATCH	Pin 10 LLATCH

Main Logic Board<-->Carrier Motor Cable #2

CN15	
Pin 1	+5Vdc
Pin 2	EA
Pin 3	Gnd
Pin 4	EB
Pin 5	Gnd
Pin 6	CATHM
Pin 7	Not Used

Main Logic Board<-->Tractor PSet & Jam Sensors

CN18	
Pin 1	TRPSS
Pin 2	TRPSG
Pin 3	TRJMP
Pin 4	TRJAM
Pin 5	TRJMG
Pin 6	DSET

Main Logic Board<-->Ribbon Motor

CN19	
Pin 1	RBD
Pin 2	RBC
Pin 3	RBB
Pin 4	RBA
Pin 5	RBCOM
Pin 6	RBCOM

Main Logic Board<-->Auto Gap Motor

CN20	
Pin 1	GPD
Pin 2	GPB
Pin 3	GPC
Pin 4	GPA
Pin 5	GPCOM
Pin 6	GPCOM

Main Logic Board<-->Serial Board (4227-200)

Main Logic Board CN22		Serial Board CN2	
Pin 1	+TXD422	Pin 12	+TXD422
Pin 2	-RXD422	Pin 11	-RXD422
Pin 3	+RXD422	Pin 10	+RXD42
Pin 4	-TXD422	Pin 9	-TXD422
Pin 5	DTR	Pin 8	DTR
Pin 6	Signal Gnd	Pin 7	Signal Gnd
Pin 7	DSR	Pin 6	DSR
Pin 8	-CTS	Pin 5	-CTS
Pin 9	RTS	Pin 4	RTS
Pin 10	RXD	Pin 3	RXD
Pin 11	TXD	Pin 2	TXD
Pin 12	SBSET	Pin 1	SBSET

Serial Board<-->Serial Cable (4227-200)

CN1			
Pin 1	Chassis Gnd	Pin 14	NC
Pin 2	TXD	Pin 15	-RXD422
Pin 3	RXD	Pin 16	NC
Pin 4	RTS	Pin 17	+RXD422
Pin 5	-CTS	Pin 18	NC
Pin 6	DSR	Pin 19	-TXD422
Pin 7	Signal Gnd	Pin 20	DTR
Pin 8	NC	Pin 21	NC
Pin 9	NC	Pin 22	NC
Pin 10	NC	Pin 23	NC
Pin 11	NC	Pin 24	NC
Pin 12	NC	Pin 25	+TXD422
Pin 13	NC		

Sub Logic Board<-->Printhead (4227-100)

CN3	CN4
Pin 1 THRMO	Pin 1 RH6
Pin 2 R5	Pin 2 RH2C
Pin 3 RH7	Pin 3 RH8
Pin 4 RH1C	Pin 4 RH4C
Pin 5 RH9	Pin 5 RH5
Pin 6 RH3C	Pin 6 RH5C
Pin 7 RH3	Pin 7 RH4
Pin 8 RH7C	Pin 8 RH6C
Pin 9 RH1	Pin 9 RH2
Pin 10 RH9C	Pin 10 RH8C
Pin 11 LH1	Pin 11 LH2
Pin 12 LH9C	Pin 12 LH8C
Pin 13 LH3	Pin 13 LH4
Pin 14 LH7C	Pin 14 LH6C
Pin 15 LH7	Pin 15 LH5
Pin 16 LH3C	Pin 16 LH5C
Pin 17 LH9	Pin 17 LH6
Pin 18 LH1C	Pin 18 LH4C
	Pin 19 LH8
	Pin 20 LH2C

Sub Logic Board<-->Printhead (4227-200)


CN1		CN2	
Pin 1	RH8	Pin 1	RH3
Pin 2	RH8C	Pin 2	RH3C
Pin 3	RH7	Pin 3	RH2
Pin 4	RH9C	Pin 4	RH4C
Pin 5	RH6	Pin 5	RH1
Pin 6	RH9	Pin6	RH5C
Pin 7	RH7C	Pin 7	RH2C
Pin 8	+5 V dc	Pin 8	RH4
Pin 9	RH6C	Pin 9	RH1C
Pin 10	HDTHERMO	Pin 10	RH5
Pin 11	LH6C	Pin 11	LH1C
Pin 12	LH9	Pin 12	LH5
Pin 13	LH7C	Pin 13	LH2C
Pin 14	LH8	Pin 14	LH4
Pin 15	LH6	Pin 15	LH1
Pin 16	LH9C	Pin 16	LH5C
Pin 17	LH7	Pin 17	LH2
Pin 18	LH8C	Pin 18	LH4C
		Pin 19	LH3
		Pin 20	LH3C

Operator Panel Board<-->Ribbon Cover Sensor


CN1	
Pin 1	C-Open
Pin 2	Signal Gnd

Connector Block Diagram

4227-100

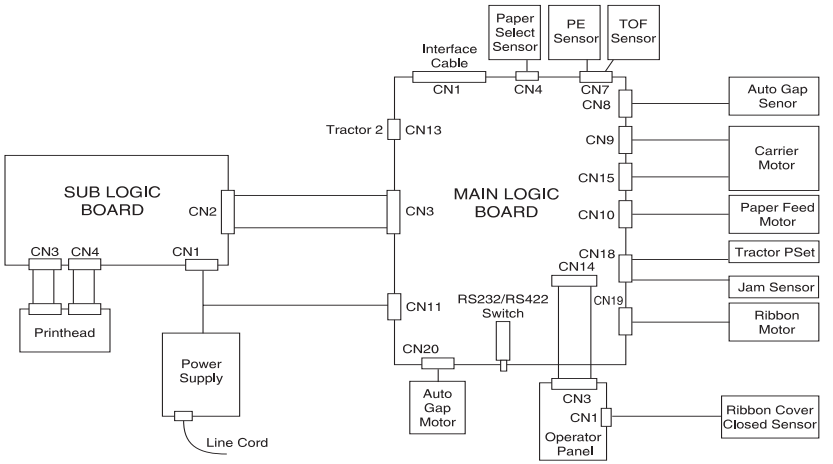

4227-200

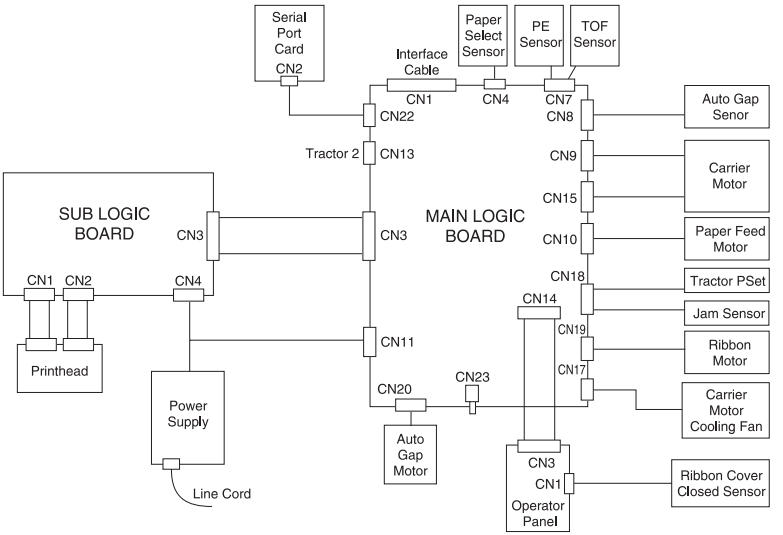

Tractor 2 Cable Connectors

The Tractor 2 cable is soldered to the board at CN1.

Pin	Mode
CN1-1	+26 V dc.
CN1-2	+26 V dc.
CN1-3	Frame Gnd.
CN1-4	Not Used.
CN1-5	+5 V dc.
CN1-6	Motor Common.
CN1-7	D-Set (Signal for Tractor 2 Plugged in).
CN1-8	Signal Gnd.
CN1-9	Motor Phase A; 0 V dc when Tractor 2 not in use; 0 V dc when Tractor 2 is in use.
CN1-10	Motor Phase B; +5 V dc when Tractor 2 not in use; 0 V dc when Tractor 2 is in use.
CN1-11	Not used.
CN1-12	Slider Home Sensor; +5 V dc when open, 0 V dc when closed.
CN1-13	Tractor 2; +5 V dc when open, 0 V dc when closed.

6. Preventive Maintenance

This chapter describes procedures for printer preventive maintenance. Following these recommendations can help prevent problems and maintain optimum performance.

Lubrication

Warning: Petroleum-based lubricants can attack polycarbonate parts causing premature failure. Use only mineral oil-based lubricant.

The following parts should be lubricated when replaced:

- Oil felt (carrier block)
- Tractor unit
- Side frame (left)
- Side frame (right)
- Pinch roller (lower)
- Pinch roller spring (left)
- Pinch roller spring (center)
- Pinch roller spring (right)
- Paper separator

Specified Lubricants

- Oil - P/N 1280443
- Approved equivalents:
  - Mobil DTE27
  - Shell Tellus 100
  - Fuchs Renolin MR30
- Grease - P/N 6934659
- Approved equivalent:
  - Mobil 28

Lubrication Points

Oil

Lubricate the following contact positions:

- Oil Felt on Carrier Shaft (under Carrier)
- Square Tractor Shaft, where left end enters Left Tractor Side Frame

Grease

Lubricate the following contact positions:


- Two gear mounting studs on the right side frame
- ASF Gear mounting stud on the right gear plate
- Slider cam and sub slider cam on the right side frame
- Mounting stud for large spur gear on left side frame
- Mounting studs for auto gap gears
- Lower pinch roller and ground spring
- Right ASF Side Frame studs and all gears
- Left ASF Side Frame studs and Upper Feed Roll Shaft
- ASF Pick-up Roller Shaft and L & R Roller Bushings
- Tractor 2 right side frame studs and all gears

7. Parts Catalog

How to Use This Parts Catalog


- SIMILAR ASSEMBLIES: If two assemblies contain a majority of identical parts, they are shown on the same list. Common parts are shown by one index number. Parts peculiar to one or the other of the assemblies are listed separately and identified by description.
- AR: (As Required) in the Units column indicates that the quantity is not the same for all machines.
- NP: (Non-Procurable) in the Units column indicates that the part is non-procurable and that the individual parts or the next higher assembly should be ordered.
- NR: (Not Recommended) in the Units column indicates that the part is procurable but not recommended for field replacement, and that the next higher assembly should be ordered.
- R: (Restricted) in the Units column indicates that the part has a restricted availability.
- NS: (Not Shown) in the Asm-Index column indicates that the part is procurable but is not pictured in the illustration.
- PP: (Parts Packet) in the Description column indicates that the part is contained in a parts packet.

Assembly 1: Covers and Operator Panel

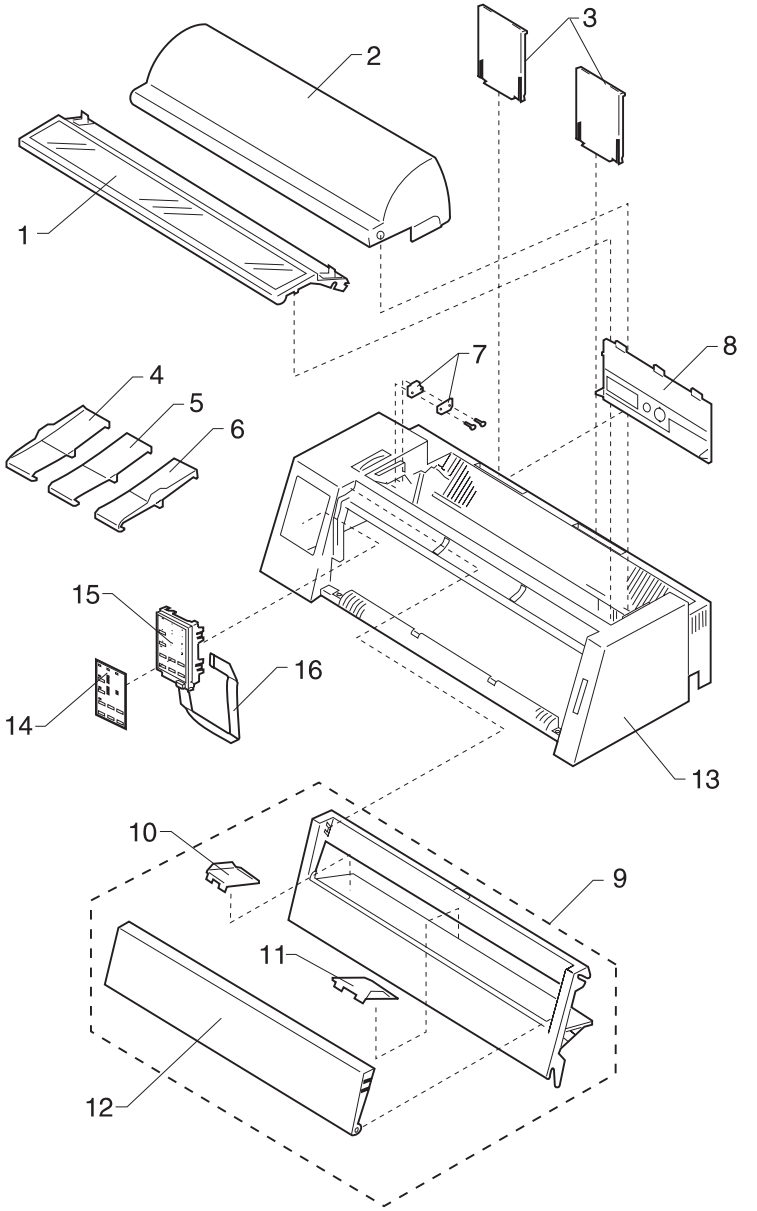


Asm-Index	Part Number	Description
1 -1	11A6201	Cover Assembly, Ribbon Access
2	11A6208	Cover, Acoustic
3	79F4782	Paper Stand
4	1333164	Extender, Paper Guide (Left)
5	1333166	Extender, Paper Guide (Center)
6	1333165	Extender, Paper Guide (Right)
7	11A6207	Switch Assembly, Cover with Cover Switch Plate
8	11A6203	Cover, Rear (4227-100)
8	12G0226	Cover, Rear (4227-200)
9	11A6189	Cover Assembly, Front (Complete)
10	1333152	Guide, Paper (Left)
11	1333167	Guide, Paper (Right)
12	79F4825	Guide, Cover (Front)
13	11A6204	Cover Assembly with Logo, (Top) (4227-100)
13	12G0213	Cover Assembly, with Logo, (Top) (4227-200)
14	11A6253	Overlay Kit, Operator Panel
15	11A6205	Operator Panel Assembly with English Overlay
16	11A6206	Cable, Operator Panel

Assembly 2: Paper Feed

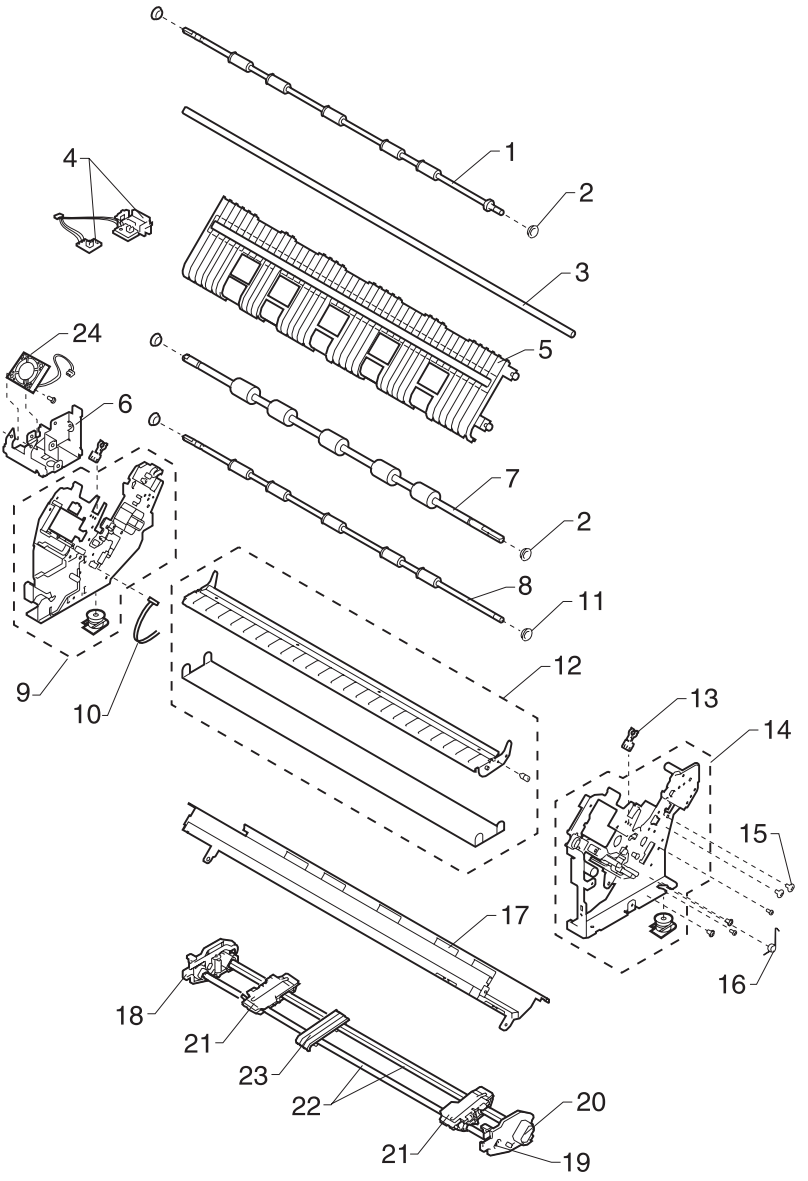


Asm-Index	Part Number	Description
2 -1	11A6231	Feed Roller, Upper
2	11A6257	Bearing Kit
3	11A6233	Frame Support Shaft
4	11A6240	TOF & Paper Empty Sensors with Flags & Springs
5	11A6239	Paper Guide / Platen Assembly
6	11A6234	Bracket, Auto-Gap Motor (4227-100)
6	12G0229	Bracket, Auto-Gap Motor (4227-200)
7	11A6241	Roller, Feed (Lower)
8	79F4832	Roller, Pinch (Lower)
9	11A6235	Side Frame Assembly, (Left) (4227-100)
9	12G0221	Side Frame Assembly, (Left) (4227-200)
10	11A6237	Sensor, Paper Select
11	11A6256	Gear Kit
12	11A6232	Separator, Paper
13	11A6236	Latch, Ribbon
14	11A6238	Side Frame Assembly, (Right)
15	11A6255	Screw and Clip Kit
16	11A6258	Spring Kit
17	11A6230	Plate, Carrier
18	11A6209	Tractor Side Frame, (Left)
19	11A6210	Tractor Side Frame, (Right)
20	11A6256	Gear Kit
21	11A6211	Tractor Pair, with Sensors (Left and Right)
22	11A6212	Shaft Kit, Tractor
23	79F4830	Paper Guide, Tractor
24	12G0228	Carrier Motor Cooling Fan (4227-200)

Assembly 3: Carrier

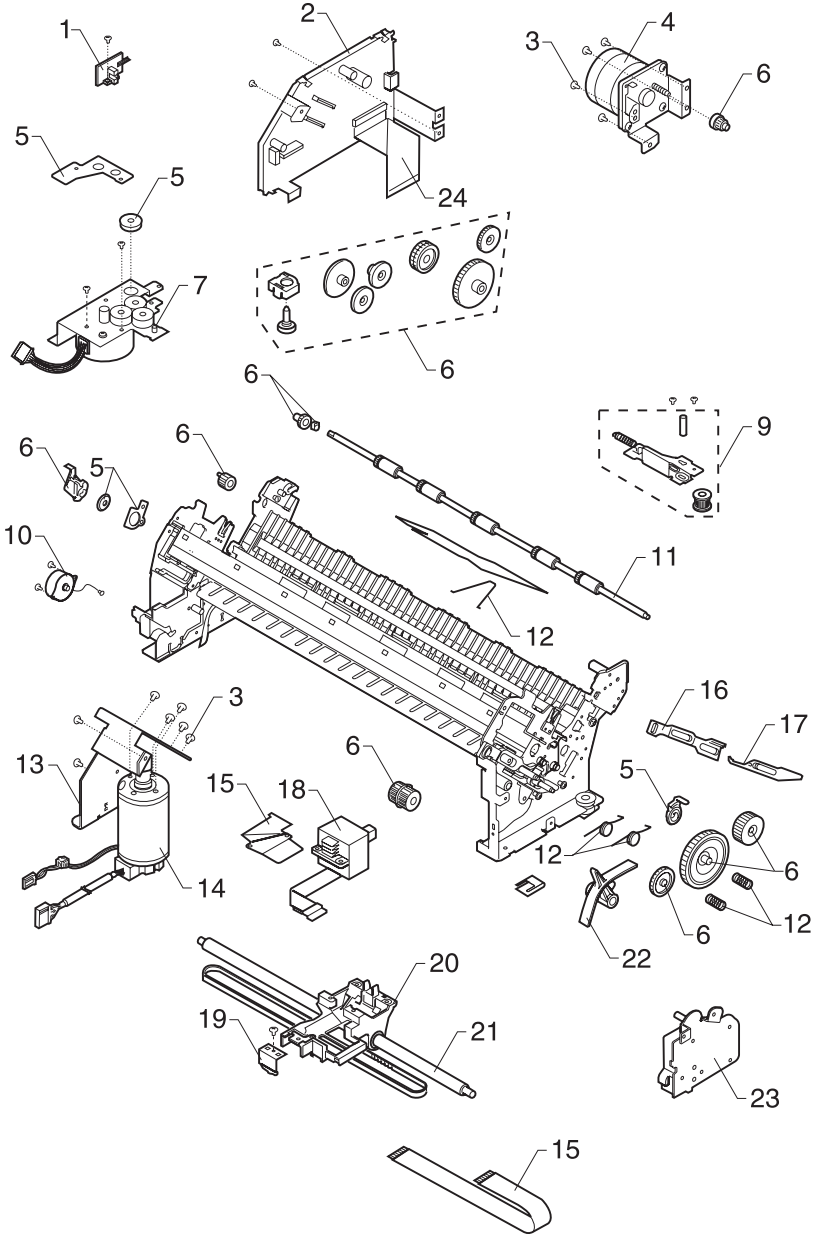

Asm-Index	Part Number	Description
3 -1	11A6229	Sensor, Auto Gap
2	11A6216	Board and Bracket, Sub Logic (4227-100)
2	12G0214	Board and Bracket, Sub Logic (4227-200)
3	11A6255	Screw, Parts Packet
4	11A6215	Motor, Paper Feed Assembly, with Bracket
5	11A6257	Bearing, Parts Packet
6	11A6256	Gears, Parts Packet (4227-100)
6	12G0212	Gears, Parts Packet (4227-200)
7	11A6220	Motor, Ribbon Drive and Gear Plate Assembly
9	11A6221	Plate Assembly, Belt Tension Pulley
10	11A6227	Motor, Auto Gap (4227-100)
10	12G0220	Motor, Auto Gap (4227-200)
11	79F4832	Roller, Lower Pinch
12	11A6258	Spring, Parts Packet
13	11A6226	Bracket, Carrier Motor (4227-100)
13	12G0230	Bracket, Carrier Motor (4227-200)
14	11A6225	Motor, Carrier Assembly (4227-100)
14	12G0231	Motor, Carrier Assembly (4227-200)
15	11A6219	Cable, Printhead and Retainer (4227-100)
15	12G0225	Cable, Printhead and Retainer (4227-200)
16	11A3310	Cam, Release Slider
17	11A3311	Cam, Sub Slider
18	11A6218	Printhead (4227-100)
18	12G0224	Printhead (4227-200)
19	11A6224	Roller and Spring, Carrier
20	11A6222	Carrier Asm. with Belt & Oil Felt (4227-100)
20	12G0232	Carrier Asm. with Belt & Head Cooling Gum (4227-200)
21	11A6223	Shaft, Carrier
22	11A6228	Lever, Paper Select
23	11A6214	Gear Plate, Right
24	11A6217	Cable, Sub Logic Board (4227-100)
24	12G0215	Cable, Sub Logic Board (4227-200)
25	12G0210	Main Logic Card Dust Cover
NS	11A6202	Gear Cover, Left


Assembly 4: Base and Electronics

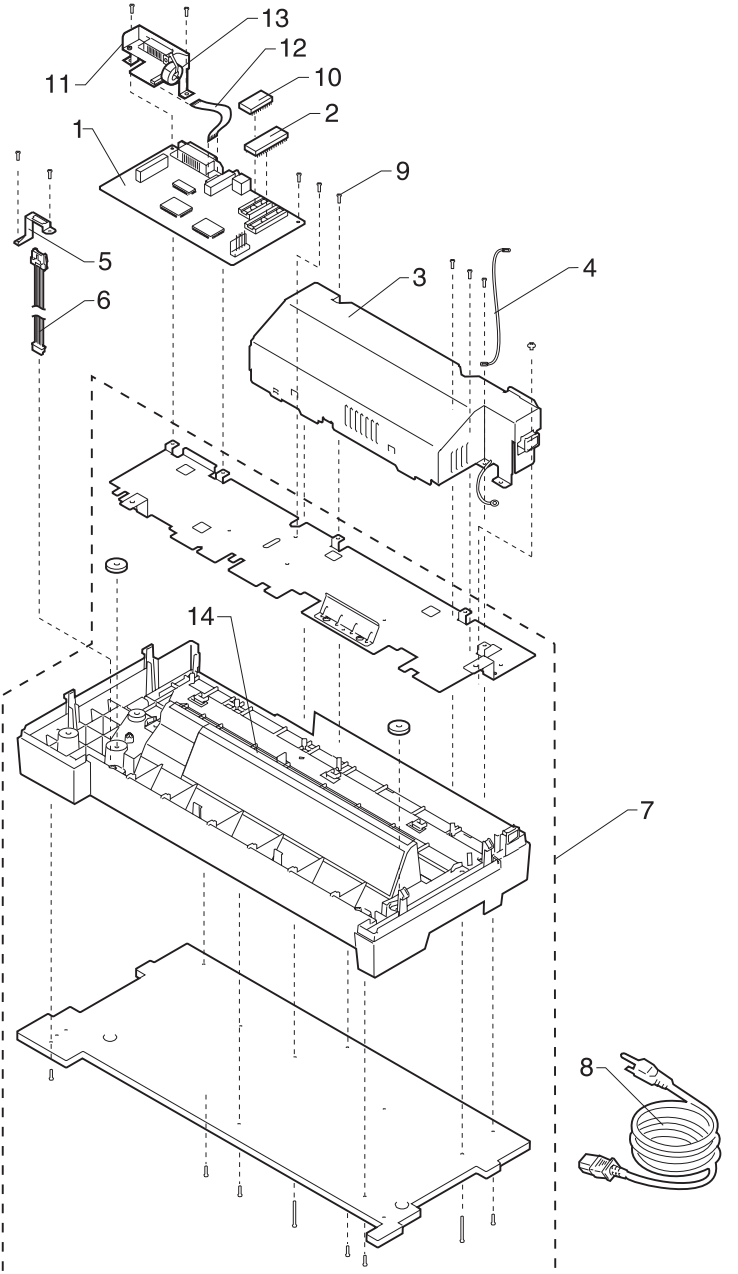

4227-X00


Asm-Index	Part Number	Description
4 -1	11A6246	Main Logic Board without ROM (LV)(4227-100)
1	12G0217	Main Logic Board without ROM (LV)(4227-200)
1	11A6247	Main Logic Board without ROM (HV) (4227-100)
1	12G0216	Main Logic Board without ROM (HV) (4227-200)
2	11G0023	ROM Kit (4227-100)
2	12G0227	ROM Kit (4227-200)
3	12G3515	Power Supply, 100 - 240 V ac
NS	11A6244	Fuse, Power Supply
NS	11A6245	Fan, Power Supply
4	11A6249	Ground Wire
5	11A6251	Bracket, Tractor Cable
6	11A6250	Cable, Tractor
7	11A6242	Base Assembly
8	1339526	Linecord (U.S., Canada, AFE (LV), Saudi Arabia (LV), Central and South America, Mexico)
8	1339519	Linecord (United Kingdom, Malaysia and Singapore)
8	1339520	Linecord (Germany, France, Spain, Norway, Finland, The Netherlands, Austria, Belgium, Brazil, Greece, Luxembourg, Portugal, Sweden, Turkey, Saudi Arabia (HV), Indonesia)
8	1339525	Linecord (Denmark)
8	1339524	Linecord (Italy and Chile)
8	1339521	Linecord (Israel)
8	70G0496	Linecord (Japan)
8	1339523	Linecord (South Africa)
8	1339522	Linecord (Switzerland)
8	1339518	Linecord (Australia,New Zealand,Argentina,Paraguay)
8	1339517	Linecord (Peru)
9	11A6255	Screw and Clip Kit
10	1180727	32Kb Memory Module (Option)
10	11A6185	Extended NLS Module, Eastern Europe (Option)
10	11A6186	Extended NLS Module, Middle East Countries (Option)
11	12G0222	Serial Port Card and Bracket Asm. (4227-200)
12	12G0223	Serial Port Card to Main Logic Board Cable (4227-200)
13	12G0218	Torroid (4227-200)
14	12G0211	Paper Guide MyLar Strip

Assembly 5: ASF Side Frame / Covers

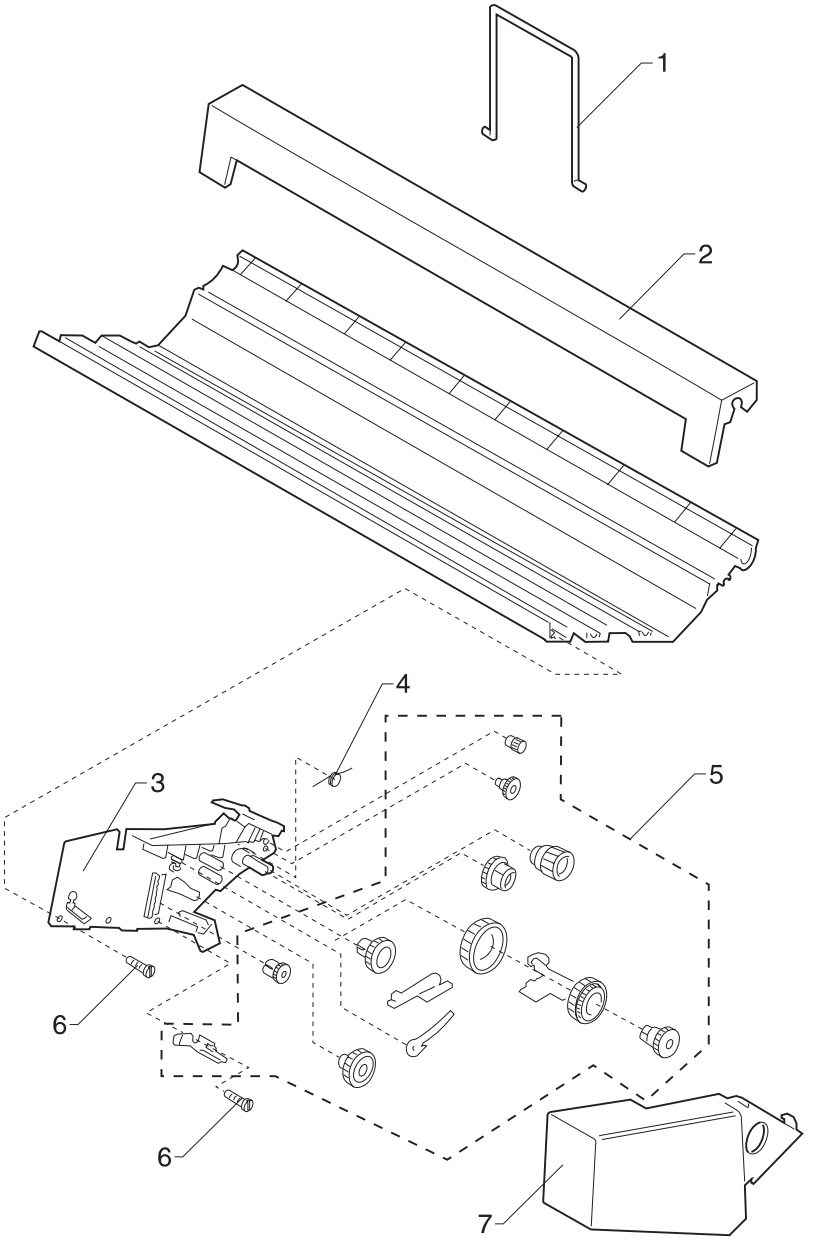


Asm-Index	Part Number	Description
5 -1	95F6901	Support, Stacking
2	95F6903	Cover, (Front)
3	95F6899	Side Frame, (Right)
4	95F6893	Spring Kit, ASF
5	95F6892	Gear and Bearing Kit, ASF
6	95F6894	Screw Kit, ASF
7	95F6882	Cover, (Right)

Assembly 6: ASF Roller / Support

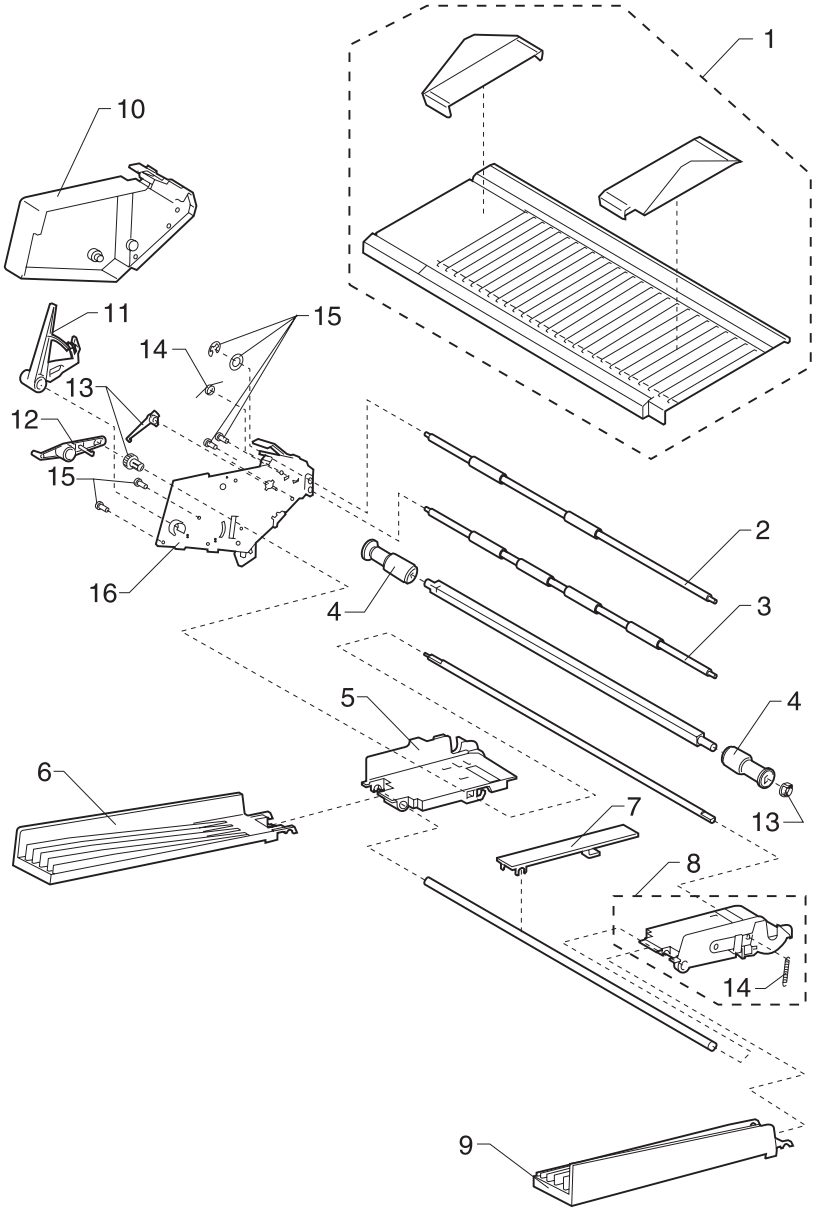

Asm-Index	Part Number	Description
6 -1	11A3334	Support, Cut Sheet with Guides
2	95F6896	Roller, Feed (Upper)
3	65F6897	Roller, Feed (Lower)
4	1333275	Roller, Pickup (Left and Right)
5	1333280	Hopper, (Left)
6	1333279	Support, Paper (Left)
7	95F6880	Support, Paper (Center)
8	1333277	Hopper, (Right)
9	1333278	Support, Paper (Right)
10	95F6881	Cover, (Left)
11	1333161	Lever, Paper Load
12	1333162	Link, Paper Load
13	95F6892	Gear and Bushing Kit, ASF
14	95F6893	Spring Kit, ASF
15	95F6894	Screw Kit, ASF
16	95F6898	Side Frame, (Left)

Assembly 7: Tractor 2 Option

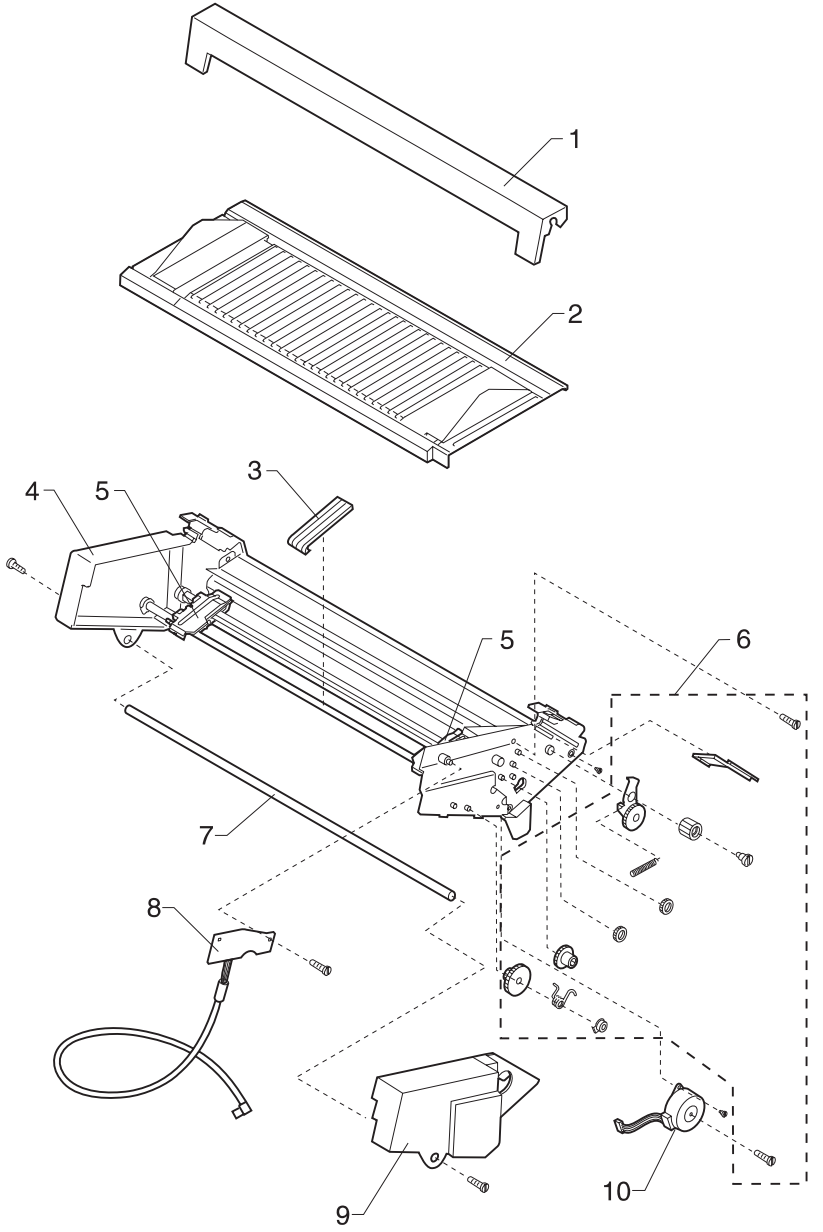

Asm-Index	Part Number	Description
7 -1	95F6903	Cover, (Front)
2	11A3343	Paper Table W/ Guides
3	11A3338	Paper Guide, Tractor
4	11A6252	Tractor and Frame Assembly
5	11A6254	Tractor Kit (Left and Right), with Sensors
6	11A3341	Parts Packet
7	11A3284	Shaft, Support
8	11A3336	Board Asm W/Cable and Ferrite
9	11A3332	Cover, (Right)
10	11A3337	Motor

Index

A

Abbreviations 1-5
Adjustments 4-2
- Bidirectional Print 4-4
- Printhead-to-Platen 4-2

ASF
- Principles of Operation 2-12

B

Bidirectional Print Adjustment 4-4
Buttons 1-11

C

Component Locations 5-6
Connector Locations 5-1, 5-7, 5-8, 5-9
Connectors
- Illustrations 5-7, 5-8
- Main Logic Board 5-3
- Operator Panel 5-5
- Sub Logic Board 5-4

D

Diagnostic Aids 3-1
- Button Test 3-4
- Error Log 3-6
- Factory Setting 3-4
- Hex Trace Mode 3-2
- Impact Force 3-5
- Interface Selection 3-3
- Jam/PSet Sensor Test 3-4
- Log Clear 3-5
- Other Print Tests 3-5
- POST 3-1
- Print Test 3-5
- Printhead Bank Test 3-4
- Service Menu 3-4

E

ESD-sensitive parts 4-1

F

Function Menus 1-7

L

Lights 1-12
Lubricants 6-1
Lubrication 6-1
Lubrication Points 6-2

M

Models available 1-1

O

Operator Panel, Using 1-6
Options 1-4

P

Parts
- ASF Roller/Support 7-12
- ASF Side Frame / Covers 7-10
- Base 7-8
- Carrier 7-6
- Covers 7-2
- Electronics 7-8
- Operator Panel 7-2
- Paper Feed 7-4
- Tractor 2 Option 7-14

Parts Catalog
- How to use 7-1

Power-On Self Test (POST) 3-1
Preventive Maintenance 6-1
- Lubrication 6-1
- Lubrication Points 6-2
- Specified Lubricants 6-1

R

Removal Procedures 4-6
Removals
- ASF Gears 4-9
- ASF Pick-up Roller 4-10
- Auto Gap Motor 4-8
- Carrier 4-12
- Carrier Motor Assembly 4-15
- Carrier Plate 4-16
- Jammed Label 4-16
- Label Jam 4-16
- Lower Feed Roller 4-17
- Main Logic Board 4-22

Memory Module 4-22
Operator Panel 4-23
Paper Empty Sensor 4-23
Paper Feed Motor 4-26
Paper Guide 4-26
Paper Guide/Platen 4-26
Paper Select Lever 4-27
Paper Select Sensor 4-27
Paper Separator 4-28
Pinch Roller (Lower) 4-21
Power Supply 4-30
Power Supply Fan 4-30
Print Unit 4-30
Printhead 4-33
Printhead Cables 4-34
Ribbon Drive Motor 4-35
Right Side Frame 4-36
Sub Logic Board 4-38
TOF Sensor 4-23
Top Cover 4-6
Upper Feed Roller 4-39

S

Safety Information x
Service Checks 2-10
Abnormal Print 2-18
ASF Auto Sheet Feeder 2-12
Auto Gap 2-10
Auto Sheet Feeder 2-12
Carrier Drive 2-14
Intermittent Problem 2-15
No Print 2-18
Operator Panel 2-19
Paper Feed 2-20
POST 2-24
Power Failure 2-25
Print Quality 2-27
Print Wire Drive Failure 2-28
Ribbon Drive 2-30
Tractor 2 2-31
Setting Printer Functions 1-8
Signal Connections 5-9
Block Diagram (4227-100) 5-20
Block Diagram (4227-200) 5-20
Main Logic Board - Auto Gap Motor 5-16
Main Logic Board - Carrier Motor Cable #1 5-13
Main Logic Board - Carrier Motor Cable #2 5-15
Main Logic Board - Carrier Motor Cooling Fan (4227-200) 5-14
Main Logic Board - Operator Panel 5-15
Main Logic Board - Paper Feed Motor 5-14
Main Logic Board - Parallel Interface Cable (4227-100) 5-9
Main Logic Board - Parallel Interface Cable (4227-200) 5-10
Main Logic Board - Ribbon Motor 5-16
Main Logic Board - Serial Board (4227-200) 5-17
Main Logic Board - Tractor PSet & Jam Sensors 5-16
Main Logic Board - Tractor 2 DIN 5-14
Main Logic Board - 5 V dc Power (4227-200) 5-15
Main Logic Board -Auto Gap Sensor 5-13
Main Logic Board -Paper Empty & TOF Sensors 5-13
Main Logic Board -Paper Select Sensor 5-13
Main Logic Board -Sub Logic Board (4227-200) 5-11, 5-12
Operator Panel Board - Ribbon Cover Sensor 5-19
Power Supply-Main & Sug Logic Board 5-9
Serial Board - Serial Cable (4227-200) 5-17
Sub Logic Board - Printhead (4227-100) 5-18

Sub Logic Board - Printhead (4227-200) 5-19
Symptom Checks
Abnormal Indications 2-4
Abnormal Print Problems 2-4
ASF Problems 2-5
Operator Panel Problems 2-7
Paper Feed Problems 2-5
Power Problems 2-7
Print Quality Problems 2-8
6XX Error Indications 2-5

T

Tests
Button Test 3-4
Jam / PSet Sensor Test 3-4
Print Test 3-5
Printhead Bank Test 3-4

U

Using the Operator Panel 1-6

Part Numbers

11A3284 7-15
11A3310 7-7
11A3311 7-7
11A3332 7-15
11A3334 7-13
11A3336 7-15
11A3337 7-15
11A3338 7-15
11A3341 7-15
11A3343 7-15
11A6185 7-9
11A6186 7-9
11A6189 7-3
11A6201 7-3
11A6202 7-7
11A6203 7-3
11A6204 7-3
11A6205 7-3
11A6206 7-3
11A6207 7-3
11A6208 7-3
11A6209 7-5
11A6210 7-5
11A6211 7-5
11A6212 7-5
11A6214 7-7
11A6215 7-7
11A6216 7-7
11A6217 7-7
11A6218 7-7
11A6219 7-7
11A6220 7-7
11A6221 7-7
11A6222 7-7
11A6223 7-7
11A6224 7-7
11A6225 7-7
11A6226 7-7
11A6227 7-7
11A6228 7-7
11A6229 7-7
11A6230 7-5
11A6231 7-5
11A6232 7-5
11A6233 7-5
11A6234 7-5
11A6235 7-5
11A6236 7-5
11A6237 7-5
11A6238 7-5
11A6239 7-5
11A6240 7-5
11A6241 7-5
11A6242 7-9
11A6243 7-9
11A6244 7-9
11A6245 7-9
11A6246 7-9
11A6247 7-9
11A6249 7-9
11A6250 7-9
11A6251 7-9
11A6252 7-15
11A6253 7-3
11A6255 7-5, 7-7, 7-9
11A6256 7-5, 7-7
11A6257 7-5, 7-7
11A6258 7-5, 7-7
11G0023 7-9
1180727 7-9

12G0210 7-7
12G0211 7-9
12G0212 7-7
12G0213 7-3
12G0214 7-7
12G0215 7-7
12G0216 7-9
12G0217 7-9
12G0218 7-9
12G0220 7-7
12G0221 7-5
12G0222 7-9
12G0223 7-9
12G0224 7-7
12G0225 7-7
12G0226 7-3
12G0227 7-9
12G0228 7-5
12G0229 7-5
12G0230 7-7
12G0231 7-7
12G0232 7-7
1333152 7-3
1333161 7-13
1333162 7-13
1333164 7-3
1333165 7-3
1333166 7-3
1333167 7-3
1333275 7-13
1333277 7-13
1333278 7-13
1333279 7-13
1333280 7-13
1339517 7-9
1339518 7-9
1339519 7-9
1339520 7-9
1339521 7-9
1339522 7-9
1339523 7-9
1339524 7-9
1339525 7-9
1339526 7-9
27 5-20
65F6897 7-13
70G0496 7-9
79F4782 7-3
79F4825 7-3
79F4830 7-5
79F4832 7-5, 7-7
95F6880 7-13
95F6881 7-13
95F6882 7-11
95F6892 7-11, 7-13
95F6893 7-11, 7-13
95F6894 7-11, 7-13
95F6896 7-13
95F6898 7-13
95F6899 7-11
95F6901 7-11
95F6903 7-11, 7-15

Reader Comment Form

Lexmark 4227-X00 Forms Printer
Service Manual
U.S. - P/N 12G0185
June 1999

You may use this form to communicate your comments about this publication, with the understanding that Lexmark may use or distribute whatever information you supply in any way it believes appropriate without incurring any obligation to you.

1. Did you find the book well organized?
   Yes ❒ No ❒

2. Was the content of the book accurate and complete?
   Yes ❒ No ❒

3. Was the book easy to use?
   Yes ❒ No ❒

4. What can we do to improve the book?

   _____

   _____

5. What is your job title?

   _____

Questions or comments about supplies, service, applications, and so on slow response time considerably. Please refer those questions or comments to your authorized dealer or point of purchase.

Note: *Please direct all requests for copies of publications to your point of purchase. Publications are not stocked at the location to which this form is addressed.*

NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL

FIRST CLASS MAIL PERMIT NO. 2659 LEXINGTON, KY

POSTAGE WILL BE PAID BY ADDRESSEE

LEXMARK INTERNATIONAL INC
DEPARTMENT D22A BUILDING 035 3
740 NEW CIRCLE ROAD NW
LEXINGTON KY 40511 9954

Fold Here

Cut Along Line

Tape Please Do Not Staple Tape